



# INTORQ

setting the standard

## INTORQ BFK458

Spring-applied brake with electromagnetic release

Translation of the Original Operating Instructions

## Document history

Material number	Version			Description
405520	1.0	08/1998	TD09	First edition for the series
405520	1.1	05/2000	TD09	Address revision Changed values of brake torques, table 1 and table 3 Supplemented table 4, switching times
460730	2.0	11/2002	TD09	All chapters: Complete editorial revisions, renaming Changed values of brake torques Drawing changes to Figures 12, 13, 14, 15 and 16 New: Chapter 7.4 "Spare parts list for double spring-applied brake"
13040626	2.1	02/2005	TD09	Changed company name to INTORQ
13284675	3.0	12/2008	TD09	Changed the tightening torques Supplemented table 5 Revision of Chapter 3.5 Supplemented Chapters 7.1 and 7.2
13284675	3.1	01/2010	TD09	Changed the maintenance intervals for holding brakes with emergency stop
13343893	4.0	07/2010	TD09	Changed values for the braking torques and rotation speeds (table 3)
13343893	4.1	05/2012	TD09	Changed strength grade of the fastening screws
13343893	5.0	10/2013	TD09	Complete revision
13343893	6.0	09/2015	SC	Restructured FM, harmonized connection diagrams, revised graphics
13343893	6.1	11/2015	SC	Revision of Chapter 8.4 (Spare parts list)
13343893	7.0	02/2016	SC	Update
13343893	8.0	03/2017	SC	Update, extension to Project Planning Notes
13343893	8.1	07/2017	SC	Added to Safety Brake
13343893	9.0	04/2018	SC	Update, ST4 migration
13343893	10.0	05/2018	SC	Holding brake in the ATEX zone, added to HFC
13343893	11.0	11/2018	SC	Update
13343893	12.0	07/2019	SC	Update, mounting of hub

## Legal regulations

### Liability

- The information, data and notes in these Operating Instructions are up to date at the time of printing. Claims referring to drive systems which have already been supplied cannot be derived from this information, illustrations and descriptions.
- We do not accept any liability for damage and operating interference caused by:
  - inappropriate use
  - unauthorised modifications to the product
  - improper work on or with the drive system
  - operating errors
  - disregarding the documentation

## Warranty




### Notice

The warranty conditions can be found in the terms of sale and delivery from INTORQ GmbH & Co. KG.

- Warranty claims must be made to INTORQ immediately after the defects or faults are detected.
- The warranty is void in all cases when liability claims cannot be made.

# Spring-applied brakes of type BFK458-06...25

Design E

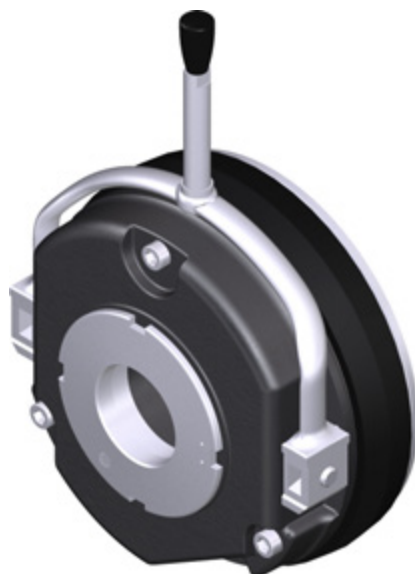


Design N



Double spring-applied brake



## Product key

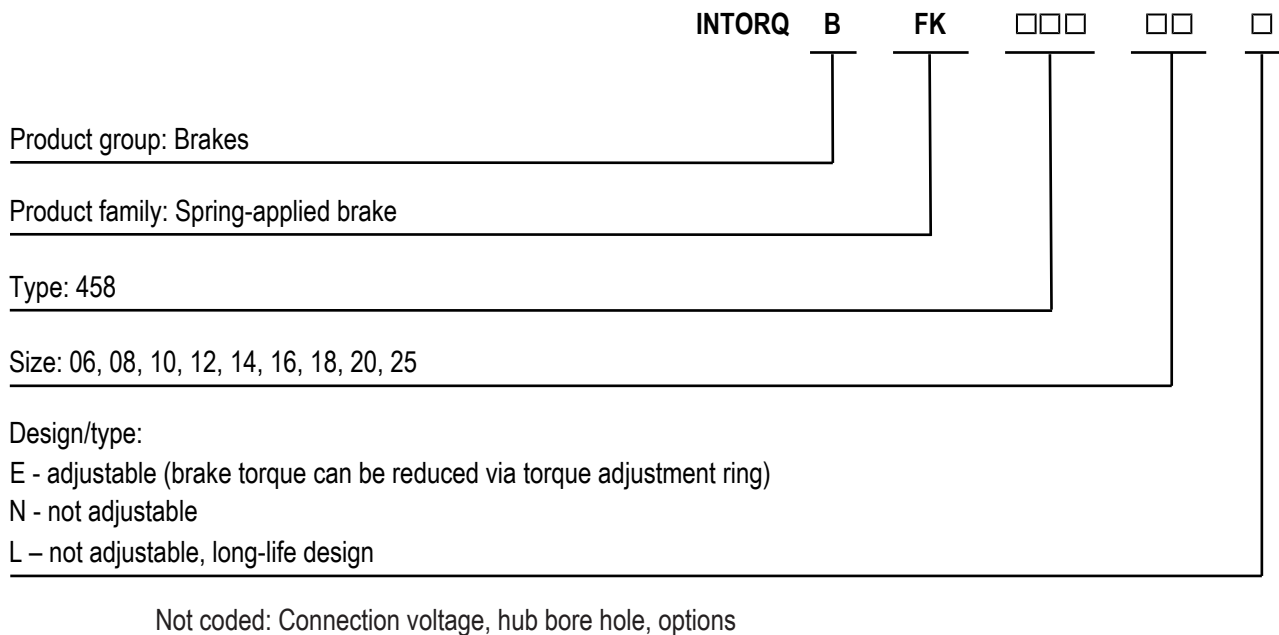

## Checking the delivery

After receipt of the delivery, check immediately whether the items delivered match the accompanying papers.

INTORQ does not accept any liability for deficiencies claimed subsequently.

- Claim visible transport damage immediately to the deliverer.
- Claim visible deficiencies or incomplete deliveries immediately to INTORQ GmbH & Co. KG.

## Contents

<b>1</b>	<b>General information .....</b>	<b>9</b>
1.1	Using these Operating Instructions .....	9
1.2	Conventions in use.....	9
1.3	Safety instructions and notices .....	9
1.4	Terminology used.....	10
1.5	Abbreviations used.....	11
<b>2</b>	<b>Safety instructions.....</b>	<b>13</b>
2.1	General safety instructions.....	13
2.2	Disposal .....	13
<b>3</b>	<b>Product description .....</b>	<b>14</b>
3.1	Proper and intended usage.....	14
3.1.1	Standard applications .....	14
3.1.2	Applications with special safety requirements ("Safety Brake").....	14
3.2	Layout .....	16
3.2.1	Basic module E.....	16
3.2.2	Basic module N .....	17
3.2.3	Basic module L .....	17
3.2.4	Double spring-applied brake.....	18
3.3	Function .....	18
3.4	Braking and release .....	19
3.5	Project planning notes.....	19
3.6	Brake torque reduction.....	19
3.7	Optional configuration .....	19
3.7.1	Hand-release (optional) .....	19
3.7.2	Optional micro-switch .....	19
3.7.3	Optional CCV.....	19

<b>4</b>	<b>Technical specifications.....</b>	<b>20</b>
4.1	Possible applications of the INTORQ spring-applied brake .....	20
4.2	Brake torques .....	21
4.3	Rated data.....	23
4.4	Switching times .....	28
4.5	Friction work / operating frequency .....	30
4.6	Electromagnetic compatibility.....	31
4.7	Emissions.....	31
4.8	Hand-release .....	32
4.9	Labels on product.....	33
<b>5</b>	<b>Mechanical installation.....</b>	<b>35</b>
5.1	Design of end shield and shaft.....	35
5.2	Tools .....	36
5.3	Preparing the installation.....	36
5.4	Installing the hub onto the shaft .....	37
5.5	Mounting the brake .....	38
5.6	Installing the friction plate (optional).....	41
5.7	Mounting the flange.....	41
5.7.1	Mounting the flange without additional screws .....	41
5.7.2	Installing the flange (variants: size 06 - 16) .....	42
5.7.3	Installing the flange (variants: size 18 - 20) .....	43
5.7.4	Installing the flange (variants: size 25) .....	44
5.8	Installing the double spring-applied brake.....	45
5.9	Cover ring assembly .....	46
5.10	Installing the shaft sealing ring.....	47
5.11	Installing the hand-release (retrofitting).....	48

<b>6</b>	<b>Electrical installation .....</b>	<b>49</b>
6.1	Electrical connection .....	49
6.2	AC switching at the motor – extremely delayed engagement .....	50
6.3	DC switching at the motor – fast engagement .....	51
6.4	AC switching at mains – delayed engagement .....	52
6.5	DC switching at mains – fast engagement .....	53
6.6	Minimum bending radius for the brake connection line .....	54
6.7	Technical specifications for the micro-switch .....	54
6.8	Bridge/half-wave rectifier (optional) .....	55
6.8.1	Assignment: Bridge/half-wave rectifier – brake size .....	55
6.8.2	Technical specifications .....	55
6.8.3	Reduced switch-off times .....	56
6.8.4	Permissible current load at ambient temperature .....	56
<b>7</b>	<b>Commissioning and operation .....</b>	<b>57</b>
7.1	Protect the electrical connections against any contact or touching .....	57
7.2	Function checks before initial commissioning .....	58
7.2.1	Function check of the brake .....	58
7.2.2	Release / voltage control .....	58
7.2.3	Testing the hand-release functionality .....	59
7.3	Commissioning .....	60
7.4	Operation .....	60
7.4.1	Brake torque reduction (for the optional adjustable braking torque) .....	61
<b>8</b>	<b>Maintenance and repair .....</b>	<b>62</b>
8.1	Wear of spring-applied brakes .....	62
8.2	Inspections .....	63
8.2.1	Maintenance intervals .....	63
8.3	Maintenance .....	63
8.3.1	Checking the components .....	64
8.3.2	Check the rotor thickness .....	64
8.3.3	Checking the air gap .....	65
8.3.4	Release / voltage .....	65
8.3.5	Adjusting the air gap .....	66
8.3.6	Replace rotor .....	66
8.4	Spare parts list .....	68
<b>9</b>	<b>Troubleshooting and fault elimination .....</b>	<b>71</b>






# 1 General information

## 1.1 Using these Operating Instructions

- These Operating Instructions will help you to work safely with the spring-applied brake with electro-magnetic release. They contain safety instructions that must be followed.
- All persons working on or with electromagnetically released spring-applied brakes must have the Operating Instructions available and observe the information and notes relevant for them.
- The Operating Instructions must always be in a complete and perfectly readable condition.

## 1.2 Conventions in use


This document uses the following styles to distinguish between different types of information:

<b>Spelling of numbers</b>	Decimal separator	Point	The decimal point is always used. For example: 1234.56
<b>Page reference</b>	Underscore, orange		Reference to another page with additional information For example: <u>Conventions in use, Page 9</u>
<b>Symbols</b>	Wildcard		Wildcard (placeholder) for options or selection details For example: BFK458-□□ = BFK458-10
	Notice		Important notice about ensuring smooth operations or other key information.





## 1.3 Safety instructions and notices

The following icons and signal words are used in this document to indicate dangers and important safety information:

## Structure of safety notices:

	<div style="background-color: yellow; padding: 5px;"><b>⚠ CAUTION</b></div> <p><b>Icon</b> Indicates the type of danger</p> <p><b>Signal word</b> Characterizes the type and severity of danger.</p> <p><b>Notice text</b> Describes the danger.</p> <p><b>Possible causes</b> List of possible consequences if the safety notices are disregarded.</p> <p><b>Protective measures</b> List of protective measures required to avoid the danger.</p>
---	---

## Danger level

	<div style="background-color: orange; padding: 5px;"><b>⚠ DANGER</b></div> <p>DANGER indicates a hazardous situation which, if not avoided, <i>will</i> result in death or serious injury.</p>
	<div style="background-color: orange; padding: 5px;"><b>⚠ WARNING</b></div> <p>WARNING indicates a potentially hazardous situation which, if not avoided, <i>could</i> result in death or serious injury.</p>
	<div style="background-color: yellow; padding: 5px;"><b>⚠ CAUTION</b></div> <p>CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.</p>
	<div style="background-color: blue; color: white; padding: 5px;"><b>NOTICE</b></div> <p>Notice about a harmful situation with possible consequences: the product itself or surrounding objects could be damaged.</p>

## 1.4

## Terminology used

Term	In the following text used for
Spring-applied brake	Spring-applied brake with electromagnetic release
Drive system	Drive systems with spring-applied brakes and other drive components
Cold Climate Version (CCV)	Version of the spring-applied brake suited for particularly low temperatures

## 1.5 Abbreviations used

Letter symbol	Unit	Designation
$F_R$	N	Rated frictional force
$I$	A	Current
$I_H$	A	Holding current, at 20 °C and holding voltage
$I_L$	A	Release current, at 20 °C and release voltage
$I_N$	A	Rated current, at 20 °C and rated voltage
$M_A$	Nm	Tightening torque of fastening screws
$M_{dyn}$	Nm	Braking torque at a constant speed of rotation
$M_K$	Nm	Rated torque of the brake, rated value at a relative speed of rotation of 100 rpm
$n_{max}$	rpm	Maximum occurring speed of rotation during the slipping time $t_3$
$P_H$	W	Coil power during holding, after voltage change-over and 20 °C
$P_L$	W	Coil power during release, before voltage change-over and 20 °C
$P_N$	W	Rated coil power, at rated voltage and 20 °C
$Q$	J	Quantity of heat/energy
$Q_E$	J	Max. permissible friction energy for one-time switching, thermal parameter of the brake
$Q_R$	J	Braking energy, friction energy
$Q_{Smax}$	J	Maximally permissible friction energy for cyclic switching, depending on the operating frequency
$R_m$	N/mm <sup>2</sup>	Tensile strength
$R_N$	Ohms	Rated coil resistance at 20 °C
$R_z$	µm	Averaged surface roughness
$S_h$	1/h	Operating frequency: the number of switching operations evenly spread over the time unit
$S_{hue}$	1/h	Transition operating frequency, thermal parameter of the brake
$S_{hmax}$	1/h	Maximum permissible operating frequency, depending on the friction energy per switching operation
$s_L$	mm	Air gap: the lift of the armature plate while the brake is switched
$s_{LN}$	mm	Rated air gap
$s_{Lmin}$	mm	Minimum air gap
$s_{Lmax}$	mm	Maximum air gap
$s_{HL}$	mm	Air gap for hand-release
$t_1$	ms	Engagement time, sum of the delay time and braking torque: rise time $t_1 = t_{11} + t_{12}$
$t_2$	ms	Disengagement time, time from switching the stator until reaching 0.1 $M_K$

Letter symbol	Unit	Designation
$t_3$	ms	Slipping time, operation time of the brake (according to $t_{11}$ ) until standstill
$t_{11}$	ms	Delay during engagement (time from switching off the supply voltage to the beginning of the torque rise)
$t_{12}$	ms	Rise time of the braking torque, time from the start of torque rise until reaching the braking torque
$t_{ue}$	s	Overexcitation period
U	V	Voltage
$U_H$	V DC	Holding voltage, after voltage change-over
$U_L$	V DC	Release voltage, before voltage change-over
$U_N$	V DC	Rated coil voltage; in the case of brakes requiring a voltage change-over, $U_N$ equals $U_L$

## 2 Safety instructions

### 2.1 General safety instructions

- Never operate INTORQ components when you notice they are damaged.
- Never make any technical changes to INTORQ components.
- Never operate INTORQ components when they are incompletely mounted or incompletely connected.
- Never operate INTORQ components without their required covers.
- Only use accessories that have been approved by INTORQ.
- Only use original spare parts from the manufacturer.

Keep the following in mind during the initial commissioning and during operation:

- Depending on the degree of protection, INTORQ components may have both live (voltage carrying), moving and rotating parts. Such components require the appropriate safety mechanisms.
- Surfaces can become hot during operation. Take the appropriate safety measures (to ensure contact/touch protection).
- Follow all specifications and information found in the Operating Instructions and the corresponding documentation. These must be followed to maintain safe, trouble-free operations and to achieve the specified product characteristics.
- The installation, maintenance and operation of INTORQ components may only be carried out by qualified personnel. According to IEC 60364 and CENELEC HD 384, skilled personnel must be qualified in the following areas:
  - Familiarity and experience with the installation, assembly, commissioning and operation of the product.
  - Specialist qualifications for the specific field of activity.
  - Skilled personnel must know and apply all regulations for the prevention of accidents, directives, and laws relevant on site.

### 2.2 Disposal

The INTORQ components are made of various differing materials.

- Recycle metals and plastics.
- Ensure professional disposal of assembled PCBs according to the applicable environmental regulations.

## 3 Product description

### 3.1 Proper and intended usage

#### 3.1.1 Standard applications

INTORQ components are intended for use in machinery and facilities. They may only be used for purposes as specified in the order and confirmed by INTORQ. The INTORQ components may only be operated under the conditions specified in these Operating Instructions. They may never be operated beyond their specified performance limits. The technical specifications (refer to [Technical specifications, Page 20](#)) must be followed to comply with the proper and intended usage. Any other usage is considered improper and prohibited.

#### 3.1.2 Applications with special safety requirements ("Safety Brake")

A safety certificate for the system must be provided in accordance with DIN EN ISO 13849 whenever the INTORQ spring-applied brakes are being used in applications that have special safety requirements. The BFK458-series brakes are suitable for use as operating brakes, as holding brakes, and as holding brakes with emergency-stop functionality for safety applications. The safety characteristics of the safety brake apply to systems that are designed so that 80% of the characteristic torque of the brake is sufficient for the safety function. The selected characteristic torque of the brake must, at a minimum, comply with the standard braking torque in order to meet the high safety requirements.

Please note the following conditions:

- Proper and intended usage of the brake as described in [Standard applications, Page 14](#)
- Compliance with the installation specifications in these Operating Instructions
- The following points are important when mounting the brake with special safety requirements:
  - The material and the surface quality of the counter friction surface are listed in the table "End shield as counter friction surface", in the chapter [Design of end shield and shaft, Page 35](#).
  - To attach the brake to the motor end shield, use screws of strength class 8.8 which are capable of handling the tightening torque listed in the tables [Rated data: screw kit for brake assembly on separately screwed-on flange, Page 24](#) and [Rated data: screw kit for brake assembly on motor, friction plate and flange with through hole, Page 24](#).
  - The fastening screws should be tightened evenly using a standard torque wrench, with a tightening torque tolerance of +/- 10%.
  - The following values apply for the minimum screw-in depths:  
Steel: 1.5 x thread diameter  
Cast: 1.75 x thread diameter
  - When determining the possible screw-in depths of the fastening screws into the motor flange, the max. adjustment (according to the table [Rated data for air gap specifications, Page 23](#)) and the projection of the screws when the brake is new must be taken into account.
  - The recommended dimensions of the screws and the screw-in depth (including the adjustment reserve for rotor wear) into the mounting holes in the motor flange can be found in the table [Rated data: screw kit for brake assembly on motor, friction plate and flange with through hole, Page 24](#).

- Version of the brake with:
  - A characteristic torque corresponding to the standard braking torque of that size or higher
  - An expected characteristic torque that covers the safety-relevant functionality, even with a drop to 80%
  - A noise-reduced rotor with toothed intermediate ring
- Compliance with the technical specifications listed in the Technical specifications, Page 20 chapter.
  - Ambient temperature during operation: -20° to +40° C
- The customer is responsible for ensuring that there is a secure connection between the shaft and the hub.
- Follow the information in chapter Installing the hub onto the shaft, Page 37 to ensure a safe shaft-to-hub connection.

Observe the following notices:


- The extended lower temperature range of the CCV version must not be reached when used as a safety brake.
- The micro-switch option is not covered by the safety certificate.
- The service life specification for the long-life version remains valid. When it is being used as a safety brake, however, the safety characteristic values for the non-long-life design must be used.
- The calculation for the safety application does not consider the wear of the friction lining or the load on the brake due to emergency stops. These points must be checked separately when configuring the brake.
- Furthermore, all specified restrictions apply to the standard and wear-resistant friction linings (e.g. permissible operating frequency, permissible friction work, reactivation during operation as a holding brake, breakaway torque after extended rest, temperature range, etc.).

The classification of the safety function of our brakes is based on the performance levels PL in accordance with DIN EN ISO 13849-1:2015. This can be used to support the verifications of the functional safety of drive systems. The safety characteristic data are available on request.

## 3.2 Layout

This chapter describes the variants, layout and functionality of the INTORQ BFK458 spring-applied brake. The basic module E is adjustable (the braking torque can be reduced using the torque adjustment ring). The special feature for basic module L (with an identical design) is the more durable materials (torque support, guide pins, toothed intermediate ring, friction lining and gear teeth). The double spring-applied brake design is especially useful in redundant braking applications.

### 3.2.1 Basic module E

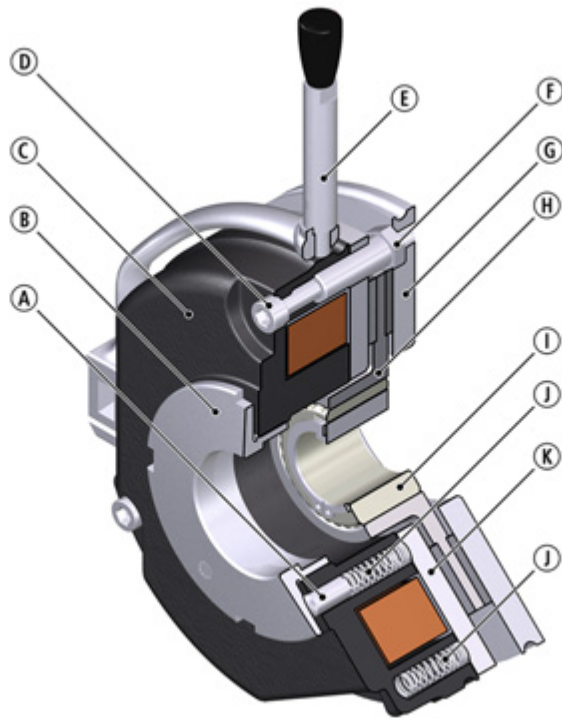


**Fig. 1:** Design of the INTORQ BFK458 spring-applied brake: Basic module E (complete stator) + rotor + hub + flange

- |                         |                           |               |
|-------------------------|---------------------------|---------------|
| Ⓐ Tappet                | Ⓑ Torque adjustment ring  | Ⓒ Stator      |
| Ⓓ Socket head cap screw | Ⓔ Hand-release (optional) | Ⓕ Sleeve bolt |
| Ⓔ Flange                | Ⓖ Rotor                   | Ⓖ Hub         |
| Ⓙ Pressure spring       | Ⓚ Armature plate          |               |



### 3.2.2 Basic module N

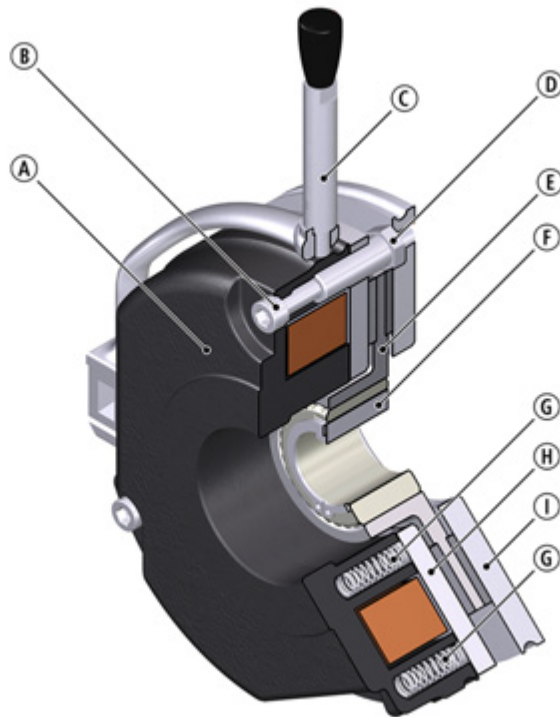

**Fig. 2: Design of the INTORQ BFK458 spring-applied brake: Basic module N (complete stator) + rotor + hub + flange**

- |                   |                         |                           |
|-------------------|-------------------------|---------------------------|
| Ⓐ Stator          | Ⓑ Socket head cap screw | Ⓒ Hand-release (optional) |
| Ⓓ Sleeve bolt     | Ⓔ Rotor                 | Ⓕ Hub                     |
| Ⓔ Pressure spring | Ⓖ Armature plate        | Ⓗ Flange                  |

### 3.2.3 Basic module L


Description of the long-life design:

- Armature plate with low backlash and reinforced torque support
- Pressure springs with guide pins for protection against shearing forces
- Aluminum rotor with toothed intermediate ring: Low-wear friction lining and low-wear gear teeth.

The long-life design can be configured modularly for size 6 to size 12 in combination with the specified rated torques. The specifications are as follows:

- The stator corresponds to the design N.
- Rear bores and extensions are not possible.
- A micro-switch in the size 12 is not configurable.

### 3.2.4 Double spring-applied brake

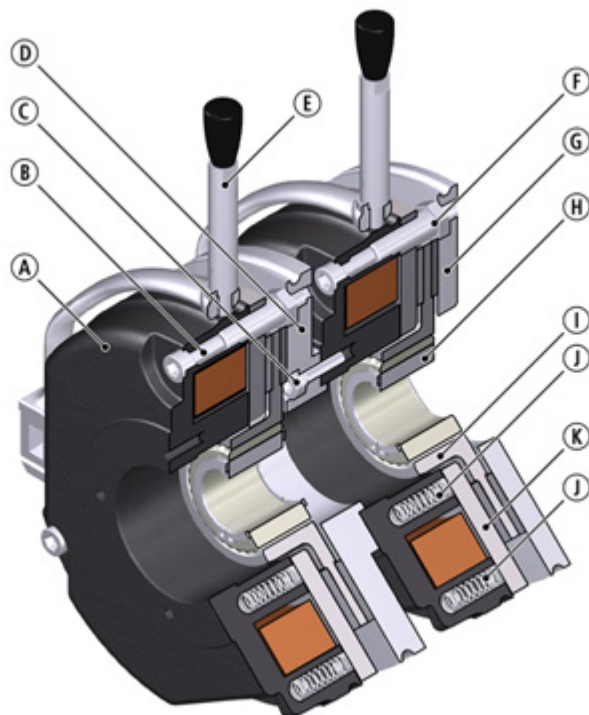

**Fig. 3:** Design of the INTORQ BFK458 spring-applied brake: Basic module N, doubled design with intermediate flange

- |                       |                           |                                 |
|-----------------------|---------------------------|---------------------------------|
| Ⓐ Stator              | Ⓑ Socket head cap screw   | Ⓒ Screw for intermediate flange |
| Ⓓ Intermediate flange | Ⓔ Hand-release (optional) | Ⓕ Sleeve bolt                   |
| Ⓔ Flange              | Ⓖ Hub                     | Ⓗ Rotor                         |
| Ⓙ Pressure spring     | Ⓚ Armature plate          |                                 |



#### Notice

A version of the double spring-applied brake using HFC (high-friction coefficient) linings is not permitted.

## 3.3 Function

This brake is an electrically releasable spring-applied brake with a rotating brake disc (rotor) that is equipped on both sides with friction linings. In its de-energised state, the rotor is clamped with braking force applied by pressure springs between the armature plate and a counter friction surface. This corresponds to a fail-safe functionality.

The brake torque applied to the rotor is transferred to the input shaft via a hub that has axial gear teeth.

The brake can be used as a holding brake, as an operating brake, and as an emergency stop brake for high speeds.

The asbestos-free friction linings ensure a safe braking torque and low wear.

To release the brake, the armature plate is released electromagnetically from the rotor. The rotor, shifted axially and balanced by the spring force, can rotate freely.

### 3.4 Braking and release

During the braking procedure, the inner and outer springs use the armature plate to press the rotor (which can be shifted axially on the hub) against the friction surface. The asbestos-free friction linings ensure high braking torque and low wear. The braking torque is transmitted between the hub and the rotor via gear teeth.

When the brakes are applied, an air gap ( $s_L$ ) is present between the stator and the armature plate. To release the brake, the coil of the stator is energised with the DC voltage provided. The resulting magnetic flux works against the spring force to draw the armature plate to the stator. This releases the rotor from the spring force and allows it to rotate freely.

### 3.5 Project planning notes

- When designing a brake for specific applications, torque tolerances, the limiting speeds of the rotors, the thermal resistance of the brake, and the effect of environmental influences must all be taken into account.
- The brakes are dimensioned in such a way that the specified rated torques are reached safely after a short run-in process.
- However, as the organic friction linings used do not all have identical properties and because environmental conditions can vary, deviations from the specified braking torques are possible. These must be taken into account in the form of appropriate dimensioning tolerances. Increased breakaway torque is common in particular after long downtimes in humid environments where temperatures vary.
- If the brake is used as a pure holding brake without dynamic load, the friction lining must be reactivated regularly.

### 3.6 Brake torque reduction

For the basic module E, the spring force and thus the brake torque can be reduced by unscrewing the central torque adjustment ring.

### 3.7 Optional configuration

#### 3.7.1 Hand-release (optional)

To temporarily release the brake when there is no electricity available, a hand-release function is available as an option. The hand-release function can be retrofitted.

#### 3.7.2 Optional micro-switch

The micro-switch is used for the release monitoring or for wear monitoring. The user is responsible for arranging the electrical connection for this optional micro-switch.

- Usage for the (air) release monitoring: The motor will start only after the brake has been released. This enables the micro-switch to monitor for errors (e.g. when the motor does not start because of a defective rectifier, if there are broken connection cables, defective coils, or an excessive air gap).
- Usage for monitoring wear: The brake and motor are not supplied with power when the air gap is too large.

#### 3.7.3 Optional CCV

The Cold Climate Version (CCV) allows the brake to be operated at lower ambient temperatures.

## 4 Technical specifications

### 4.1 Possible applications of the INTORQ spring-applied brake

■ Degree of protection:

- The brake is designed for operation under the environmental conditions that apply to IP54 protection. Because of the numerous possibilities of using the brake, it is still necessary to check the functionality of all mechanical components under the corresponding operating conditions.

■ Ambient temperature:

- -20 °C to +40 °C (Standard)
- -40 °C to +40 °C (Cold Climate Version: CCV)



#### NOTICE

When using the spring-applied brake as safety brake, the temperature range specified for the Cold Climate Version (CCV) is **not** permitted.



#### Notice

The INTORQ BFK458 size 06 to 25 spring-applied brakes described in these operating instructions may be used in normal operation in areas where there is **not expected to be any** explosive atmosphere due to gases, vapors, mist or swirling dust – **but if they nevertheless did occur, then only rarely and for a short period of time within the meaning of the ATEX Directive 2014/34/EU** – as holding brakes, as holding brakes with emergency stop functionality, and as operating brakes.

Special conditions and instructions for safe operations within the ATEX zone are detailed in the INTORQ Operating Instructions BFK458-ATEX BA14.0217. You can also contact the INTORQ sales department for this information.

## 4.2 Brake torques



### NOTICE

Please observe that engagement times and disengagement times change depending on the brake torque.


Size	06	08	10	12	14	16	18	20	25
Rated torque $M_K$ [Nm] of the brake, rated value at a relative speed of rotation of 100 rpm Standard lining (ST) and wear-resistant lining (WR)								80 E	
	1.5 E	3.5 N/E/L			25 N/E	35 N/E	65 N/E	115 N/E	175 N/E
	2 N/E/L	4 E	7 N/E/L	14 N/E/L	35 N	45 N/E	80 N/E	145 N/E	220 N
	2.5 N/E	5 N/E	9 N/E	18 N/E	40 N/E	55 N/E	100 N/E	170 N/E	265 N/E
	3 N/E/L	6 N/E/L	11 N/E/L	23 N/E/L	45 N/E	60 N/E	115 N/E	200 N/E	300 N/E
	3.5 N/E/L	7 N/E/L	14 N/E/L	27 N/E/L	55 N/E	70 N/E	130 N/E	230 N/E	350 N/E
	4 N/E/L	8 N/E/L	16 N/E/L	32 N/E/L	60 N/E	80 N/E	150 N/E	260 N/E	400 N/E
	4.5 N/E	9 N/E	18 N/E	36 N/E	65 N/E	90 N/E	165 N/E	290 N/E	445 N/E
	5 E	10 E	20 E	40 E	75 N/E	100 N/E	185 N/E	315 N/E	490 N/E
	5.5 E	11 E	23 N/E	46 N/E	80 N/E	105 N/E	200 N/E	345 N/E	530 N/E
	6 N/E	12 N/E				125 N/E	235 N/E	400 N/E	600 N/E
Torque reduction per de- tent [Nm], for design type E	0.2	0.35	0.8	1.3	1.7	1.6	3.6	5.6	6.2
Rated torque $M_K$ [Nm] with HFC (high-friction coefficient) lining	7.5 N/E	15 N/E	28 N/E	55 N/E	100 N/E	150 N/E	290 N/E	490 N/E	720 N/E
Torque reduction per de- tent [Nm], for design type E with HFC lining	0.25	0.4	1.0	1.6	2.1	1.9	4.4	6.9	7.5

**Tab. 1: Braking torques and possible brake torque reduction: Adjustable for the design types with HFC**

**N Type without brake torque adjustment**

**E Type with brake torque adjustment**

**L Type in the long-life version**




Operating brake ( $s_{Lmax}$  approx.  $2.5 \times s_{LN}$ )

Standard braking torque

Holding brake with emergency stop ( $s_{Lmax}$  approx.  $1.5 \times s_{LN}$ )

For basic module E, the brake torque can be reduced using the torque adjustment ring in the stator. The adjustment ring may only be unscrewed until the maximum protrusion (overhang)  $h_{\text{Emax}}$ ; refer to the **Rated data for air gap specifications** table and Brake torque reduction (for the optional adjustable braking torque), Page 61.

	NOTICE
When using the spring-applied brake as a safety brake: Observe the information concerning the shaft-hub connection in section <u>Applications with special safety requirements ("Safety Brake")</u> , Page 14.	

When using a standard friction lining, the maximum speeds and friction work ( $Q_E$ ) values specified in the catalog apply for each brake size. For wear-resistant (WR) friction linings and friction linings with a high-friction coefficient (HFC), the following restrictions apply regarding friction work and speed.

Size / speed [rpm]	06	08	10	12	14	16	18	20	25
100	3000	7500	12000	24000	30000	36000	60000	80000	120000
1000	3000	7500	12000	24000	30000	36000	60000	80000	120000
1200	3000	7500	12000	24000	30000	36000	60000	80000	120000
1500	3000	7500	12000	24000	30000	36000	60000	24000	36000
1800	3000	7500	12000	24000	30000	36000	36000	*	*
3000	3000	7500	12000	24000	18000	11000	*	*	*
3600	3000	7500	12000	7000	*	*	*	*	*

Tab. 2: WR versions: Maximum permissible friction work, in joules

\*  
on request

Size / speed [rpm]	06	08	10	12	14	16	18	20	25
100	3000	7500	12000	24000	30000	36000	60000	80000	120000
1000	3000	7500	12000	24000	30000	36000	60000	80000	120000
1200	3000	7500	12000	24000	30000	36000	60000	48000	36000
1500	3000	7500	12000	24000	18000	18000	18000	18000	10000
1800	3000	7500	12000	24000	10000	10000	*	*	*
3000	3000	7500	12000	7000	*	*	*	*	*
3600	3000	7500	3500	*	*	*	*	*	*

Tab. 3: HFC version: Maximum permissible friction work, in joules

\*  
on request

### 4.3 Rated data

Size	Rated brake torque at $\Delta n=100$ rpm	Braking torque at $\Delta n_0$ [rpm]			Max. speed $\Delta n_{0max}$ . when mounted horizontally
		1500	3000	maximum	
	[%]	[%]	[%]	[%]	[rpm]
06	100	87	80	74	6000
08		85	78	73	5000
10		83	76		4000
12		81	74		3600
14		80	73	72	
16		79	72	70	
18		77	70	68	
20		75	68	66	
25		73	66		3000

Tab. 4: Rated data for braking torques, depending on the speed and permissible limiting speeds

Size	$s_{LN}^{+0.1/-0.05}$	$s_{Lmax}$ Operating brake	$s_{Lmax}$ Holding brake	Max. adjustment, per- missible wear dis- tance	Rotor thickness		Protrusion adjustment ring $h_{Emax}$
	[mm]	[mm]	[mm]		min. <sup>1)</sup>	Max.	
06	0.2	0.5	0.3	1.5	4.5	6.0	4.5
08					5.5	7.0	
10					7.5	9.0	7.5
12	0.3	0.75	0.45	2.0	8.0	10.0	9.5
14				2.5	7.5		11
16				3.5	8.0		10
18	0.4	1.0	0.6	3.0	10.0	13.0	15
20				4.0	12.0	16.0	17
25	0.5	1.25	0.75	4.5	15.5	20.0	19.5

Tab. 5: Rated data for air gap specifications

<sup>1)</sup> The friction lining is sized so that the brake can be adjusted at least five times.



#### NOTICE

To attach the brake to the motor end shield, use screws of strength class 8.8 which are capable of handling the tightening torque.

Size	Screw hole circle	Screw set for flange attachment DIN EN ISO 4762 (8.8) <sup>1)</sup>	Screw set for mounting to the flange	Minimum depth of the free bore holes (in the end shield)	Tightening torque	
	Ø [mm]			[mm]	Screws ± 10% [Nm]	Complete lever ± 10% [Nm]
06	72	3 x M4	3 x M4x35	0.5	3.0	2.8
08	90	3 x M5	3 x M5x40	1	5.9	
10	112	3 x M6	3 x M6x50	2	10.1	4.8
12	132	3 x M6	3 x M6x55	3		
14	145	3 x M8	3 x M8x65	1.5	24.6	12
16	170		3 x M8x70	0.5		
18	196	4 x M8 <sup>2)</sup>	6 x M8x80	0.8	48	23
20	230	4 x M10 <sup>2)</sup>	6 x M10x90	2.1		
25	278	6 x M10 <sup>3)</sup>	6 x M10x100	5		40

**Tab. 6:** Rated data: screw kit for brake assembly on separately screwed-on flange

<sup>1)</sup> The screw length depends on the material and the thickness of the customer's mounting surface.


<sup>2)</sup> The thread in the mounting surface is offset by 30° in reference to the center axle of the hand-release lever.

<sup>3)</sup> Hex head screw according to DIN EN ISO 4017 - 8.8.

Size	Screw hole circle	Screw set for mounting onto the motor/friction plate	Screw set for flange with through hole	Possible screw-in depth <sup>4)</sup>	Tightening torque	
	Ø [mm]			[mm]	Screws ± 10% [Nm]	Complete lever ± 10% [Nm]
06	72	3 x M4x40	3 x M4x45	12	3.0	2.8
08	90	3 x M5x45	3 x M5x50	13	5.9	
10	112	3 x M6x55	3 x M6x65	18	10.1	4.8
12	132	3 x M6x60	3 x M6x70	18		
14	145	3 x M8x70	3 x M8x80	18	24.6	12
16	170	3 x M8x80	3 x M8x90	22		
18	196	6 x M8x90	-	22	48	23
20	230	6 x M10x100	-	24		
25	278	6 x M10x110	-	28		40

**Tab. 7:** Rated data: screw kit for brake assembly on motor, friction plate and flange with through hole

<sup>4)</sup> Possible screw-in depth = protruding screw plus adjustment reserve for the rotor

	<b>NOTICE</b>
	<p>With the double spring-applied brake design, when working with braking torques which are greater than the standard braking torque, you need to check the screws connecting the first brake. Please consult with INTORQ first!</p>



Size	Screw hole circle		Screw set for mounting double flange to complete stator, DIN EN ISO 4762 strength grade 8.8 (10.9)	Thread depth in the magnet housing	Tightening torque
	Ø [mm]	Thread	(4 pieces)	[mm]	[Nm]
06	37.7	4 x M4	M4x16	10	3.0
08	49	4 x M5	M5x16	12	5.9
10	54				
12	64		M5x20		
14	75	4 x M6	M6x20	15	10.1
16	85		M6x25		
18	95	4 x M8	M8x25	17	24.6
20	110	4 x M10	M10x25	20	48
25	140		M10x30 – 10.9		71

Tab. 8: Rated data: screw set, intermediate flange installation for double spring-applied brake

Size	Electrical power $P_{20}^{1)}$	Coil voltage U	Coil resistance $R_{20} \pm 8\%$	Rated current $I_N$
	[W]	[V]	[Ω]	[A]
06	20	24	28.8	0.83
		96	460.8	0.21
		103	530.5	0.194
		170	1445	0.114
		180	1620	0.111
		190	1805	0.105
		205	2101	0.098
08	25	24	23	1.04
		96	268	0.26
		103	424.4	0.242
		170	1156	0.147
		180	1296	0.138
		190	1444	0.131
		205	1681	0.121

Size	Electrical power $P_{20}^{1)}$	Coil voltage U	Coil resistance $R_{20} \pm 8\%$	Rated current $I_N$
	[W]	[V]	[Ω]	[A]
10	30	24	19.2	1.25
	31	96	297.3	0.322
	32	103	331.5	0.31
	30	170	963.3	0.176
	32	180	1013	0.177
	30	190	1203	0.157
	33	205	1273	0.160
12	40	24	14.4	1.66
		96	230.4	0.41
		103	265.2	0.388
		170	722.5	0.235
		180	810	0.222
		190	902.5	0.210
		205	1051	0.195
14	50	24	11.5	2.08
		96	184.3	0.52
	53	103	200.2	0.514
	50	170	578	0.294
	53	180	611.3	0.294
	50	190	722	0.263
	53	205	792.9	0.258
16	55	24	10.5	2.29
		96	167.6	0.573
	56	103	189.5	0.543
	55	170	525.5	0.323
		180	589.1	0.305
	60	190	601.7	0.315
	56	205	750.5	0.292

Size	Electrical power $P_{20}^{1)}$	Coil voltage U	Coil resistance $R_{20} \pm 8\%$	Rated current $I_N$
	[W]	[V]	[Ω]	[A]
18	85	24	6.8	3.54
		96	108.4	0.885
		103	124.8	0.825
		170	340	0.5
		180	387.2	0.472
		190	424.7	0.447
		205	494.4	0.414
20	100	24	5.76	4.16
		96	92.2	1.04
		103	106.1	0.970
		170	289	0.588
		180	324	0.55
		190	328.2	0.578
		205	420.3	0.487
25	110	24	5.24	4.58
		96	83.8	1.14
		103	96.5	1.06
		170	262.7	0.647
		180	294.6	0.611
		190	328.2	0.578
		205	382.1	0.536

**Tab. 9: Rated data for coil powers**
<sup>1)</sup> Coil power at 20 °C in W, deviation up to +10% is possible depending on the selected connection voltage.

## 4.4 Switching times

The operating times listed here are guide values which apply to DC switching with rated air gap  $s_{LN}$ , warm coil and standard characteristic torque. The operating times given are mean values and subject to variations. The engagement time  $t_1$  is approximately 8 to 10 times longer for AC switching. ...

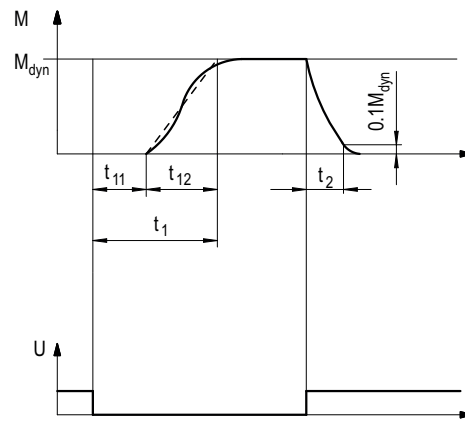


Fig. 4: Operating/switching times of the spring-applied brakes

$t_1$	Engagement time	$t_{11}$	Delay time during engagement
$t_2$	Disengagement time (up to $M = 0.1 M_{dyn}$ )	$t_{12}$	Rise time of the braking torque
$M_{dyn}$	Braking torque at a constant speed of rotation	$U$	Voltage

Size	Rated torque $M_K$	$Q_E^{1)}$	$S_{hue}$	Operating times <sup>2)</sup>			
				DC-side engagement			Disengaging
				$t_{11}$	$t_{12}$	$t_1$	$t_2$
	[Nm]	[J]	[1/h]	[ms]	[ms]	[ms]	[ms]
06	4	3000	79	15	13	28	45
08	8	7500	50	15	16	31	57
10	16	12000	40	28	19	47	76
12	32	24000	30	28	25	53	115
14	60	30000	28	17	25	42	210
16	80	36000	27	27	30	57	220
18	150	60000	20	33	45	78	270
20	260	80000	19	65	100	165	340
25	400	120000	15	110	120	230	390

Tab. 10: Switching energy - operating frequency - operating times

<sup>1)</sup> The maximum permissible friction energy  $Q_E$  relates to the standard friction lining.

<sup>2)</sup> These switching times are specified for usage of INTORQ bridge/half-wave rectifiers and coils with a connection voltage of 205 V DC at  $s_{LN}$  and  $0.7 I_N$ .

### Engagement time

The transition from a brake-torque-free state to a holding-braking torque is not free of time lags.

For emergency braking, short engagement times for the brake are absolutely essential. The DC-side switching in connection with a suitable spark suppressor must therefore be provided.

Engagement time: A braking torque reduction via the torque adjustment ring prolongs the engagement time and reduces the disengagement time. An anti-magnetic pole shim is available when there is excessive prolongation. This plate is installed between the stator and the armature plate. The plate reduces the engagement time and prolongs the disengagement time.

Engagement time for AC-side switching: The engagement time is significantly prolonged (approx. 10 times longer).



#### NOTICE

Connect the spark suppressors in parallel to the contact. If this is not admissible for safety reasons (e.g. with hoists and lifts), the spark suppressor can also be connected in parallel to the brake coil.

- If the drive system is operated with a frequency inverter so that the brake will not be de-energized before the motor is at standstill, AC switching is also possible (not applicable to emergency braking).
- The specified engagement times are valid for DC switching with a spark suppressor.
  - Circuit proposals: refer to DC switching at mains – fast engagement, Page 53.



#### Notice

Spark suppressors are available for the rated voltages.

### Disengagement time

The disengagement time is the same for DC-side and AC-side switching. The specified disengagement times always refer to control using INTORQ rectifiers and rated voltage.

## 4.5 Friction work / operating frequency

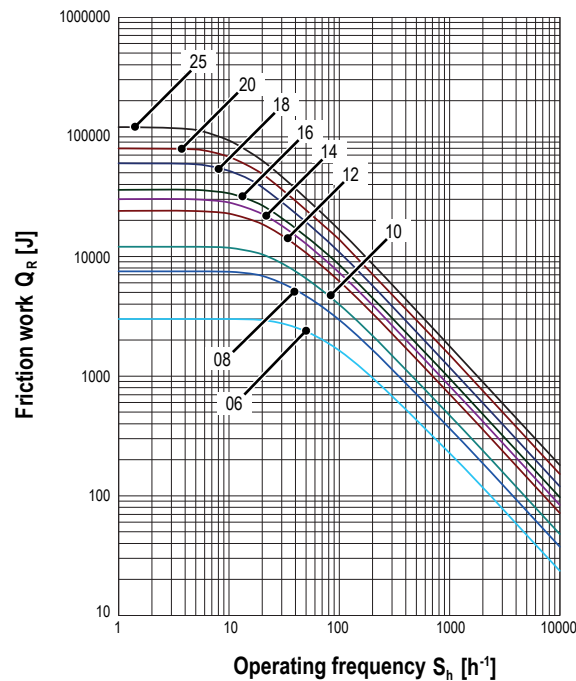


Fig. 5: Friction work as a function of the operating frequency

$$S_{hmax} = \frac{-S_{hue}}{\ln\left(1 - \frac{Q_R}{Q_E}\right)}$$

$$Q_{hmax} = Q_E \left( 1 - e^{\frac{-S_{hue}}{S_h}} \right)$$

The permissible operating frequency  $S_{hmax}$  depends on the amount of heat  $Q_R$  (refer to [Figure Friction work / operating frequency, Page 30](#)). At a pre-set operating frequency  $S_h$ , the permissible amount of heat is  $Q_{Smax}$ .



### Notice

With high speeds of rotation and switching energy, the wear increases, because very high temperatures occur at the friction surfaces for a short time.

## 4.6 Electromagnetic compatibility



### Notice

The user must ensure compliance with EMC Directive 2014/30/EC using appropriate controls and switching devices.



### NOTICE

If an INTORQ rectifier is used for the DC switching of the spring-applied brake and if the operating frequency exceeds five switching operations per minute, the use of a mains filter is required.

If the spring-applied brake uses a rectifier of another manufacturer for the switching, it may become necessary to connect a spark suppressor in parallel with the AC voltage. Spark suppressors are available on request, depending on the coil voltage.

## 4.7 Emissions

### Heat

Since the brake converts kinetic energy as well as mechanical and electrical energy into heat, the surface temperature varies considerably, depending on the operating conditions and possible heat dissipation. Under unfavourable conditions, the surface temperature can reach 130 °C.

### Noise

The loudness of the switching noise during engaging and disengaging depends on the air gap "s<sub>L</sub>" and the brake size.

Depending on the natural oscillation after installation, operating conditions and the state of the friction surfaces, the brake may squeak during braking.

## 4.8 Hand-release

The hand-release mechanism is used to release the brake by hand and can be retrofitted (refer to [Installing the hand-release \(retrofitting\)](#), Page 48).

The hand-release springs back to its original position automatically after operation. The hand-release requires an additional air gap  $s_{HL}$  in order to function; this is factory-set prior to delivery. Verify the dimension  $s_{HL}$  after the installation.

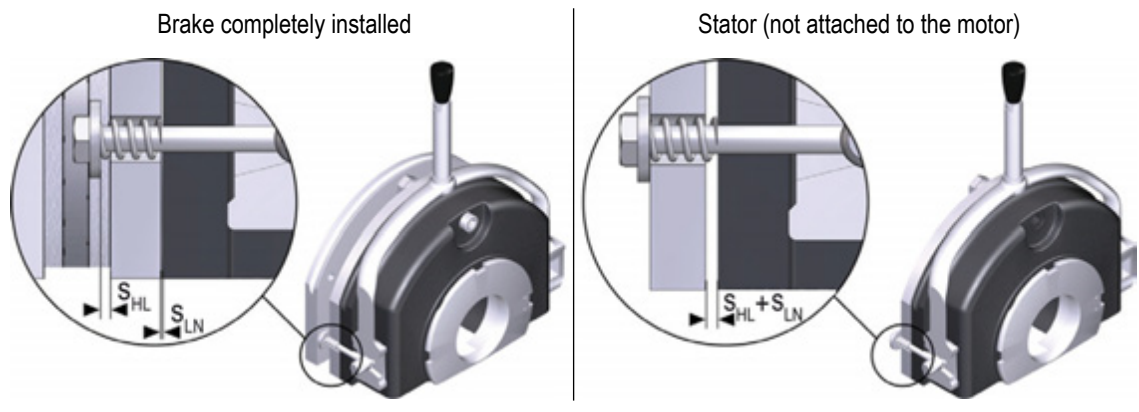


Fig. 6: Positions of the adjustment dimensions that must be checked

Size	$s_{LN}^{+0.1 / -0.05}$	$s_{HL}^{+0.1}$
	[mm]	[mm]
06	0.2	1
08		
10		
12	0.3	1.5
14		
16		
18	0.4	2
20		
25	0.5	2.5

Tab. 11: Adjustment setting for hand-release





4.9 Labels on product

There is a packaging label on the package. The name plate is glued to the outer surface of the brake.



Fig. 7: Packaging label

INTORQ	Manufacturer
13.227.500	ID number
BFK458-12E	Type (refer to <a href="#">Product key, Page 5</a> )
	Bar code
SPRING-APPLIED BRAKE	Designation of the product family
205 V DC	Rated voltage
32 NM	Rated torque
Pieces	Qty. per box
40 W	Rated power
25 H7	Hub diameter
1 Jun. 2017	Packaging date
Anti-rust packaging: keep friction surface free of grease!	Addition
	CE mark

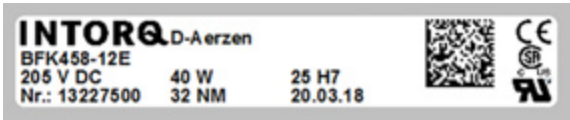






Fig. 8: Name plate (example)

INTORQ	Manufacturer
BFK458-12E	Type (refer to <a href="#">Product key, Page 5</a> )
205 V DC	Rated voltage
40 W	Rated power
20 H7	Hub diameter
No. 15049627	ID number
32 NM	Rated torque
20 Mar. 2018	Date of manufacture
	Data matrix code
	CE mark
	CSA/CUS acceptance
	UL mark

## 5 Mechanical installation

This chapter provides step-by-step instructions for the installation.

### Important notes



#### NOTICE

The toothed hub and screws must not be lubricated with grease or oil.

### 5.1 Design of end shield and shaft

- Comply with the specified minimum requirements regarding the end shield and the shaft to ensure a correct function of the brake.
- The diameter of the shaft shoulder must not be greater than the tooth root diameter of the hub.
- The form and position tolerances apply only to the materials mentioned. Consult with INTORQ before using other materials; INTORQ's written confirmation is required for such usage.
- The brake flange must be supported by the end shield across the full surface.
- Depending on the type of installation, additional clearing bore holes may be required.
- Threaded holes with minimum thread depth: refer to Rated data: screw kit for brake assembly on motor, friction plate and flange with through hole, Page 24
- Keep the end shield free from grease or oil.

#### Minimum requirements of the end shield






Size	Run-out	Material <sup>1) 2)</sup>	Levelness	Roughness <sup>2)</sup>	Tensile strength R <sub>m</sub>	
	[mm]		[mm]		[N/mm <sup>2</sup> ]	
06	0.03	S235JR; C15; EN-GJL-250	< 0.06	Rz6	250	
08	0.03					
10	0.03					
12	0.05					
14	0.05		< 0.10	Rz10		
16	0.08					
18	0.08					
20	0.08					
25	0.10					

**Tab. 12:** End shield as counter friction surface

<sup>1)</sup> Consult with INTORQ before using other materials.

<sup>2)</sup> When **no** brake flange or friction plate is used.




## 5.2 Tools

Size	Torque wrench Insert for hexagonal socket (Allen) screws		Open-end wrench Width across flats		Hook wrench DIN 1810 Type A	Socket wrench for external flange mount	
							
	Measuring range	Wrench width	Sleeve bolts	Hand-release screws	Diameter	Width across flats	
	[Nm]	[mm]	[mm]	[mm]	[mm]	[mm]	
06	1 to 12	3	8	7 / 5.5	45 - 55	-	
08		4	9	10 / 7	52 - 55	-	
10		5	12		68 - 75	-	
12					80 - 90	-	
14	20 to 100	6	15	12 / 8	95 - 100	-	
16				- / 10	110 - 115	13	
18					135 - 145	17	
20					155 - 165		
25			8	17			



### NOTICE

Tightening torques: refer to the table Rated data: screw kit for brake assembly on separately screwed-on flange, Page 24.

Multimeter	Caliper gauge	Feeler gauge
		

## 5.3 Preparing the installation

1. Remove the packaging from the spring-applied brake and dispose of it properly.
2. Check the delivery for completeness.
3. Check the name plate specifications (especially rated voltage)!

## 5.4 Installing the hub onto the shaft



### Notice

Recommended ISO fitting for shaft:

Up to 50 mm diameter: k6


Greater than 50 mm diameter: m6

Recommended roughness of the shaft:  $R_{zmax}$  10



### NOTICE

For brakes with HFC linings, only use the hubs provided; consult with INTORQ if necessary.

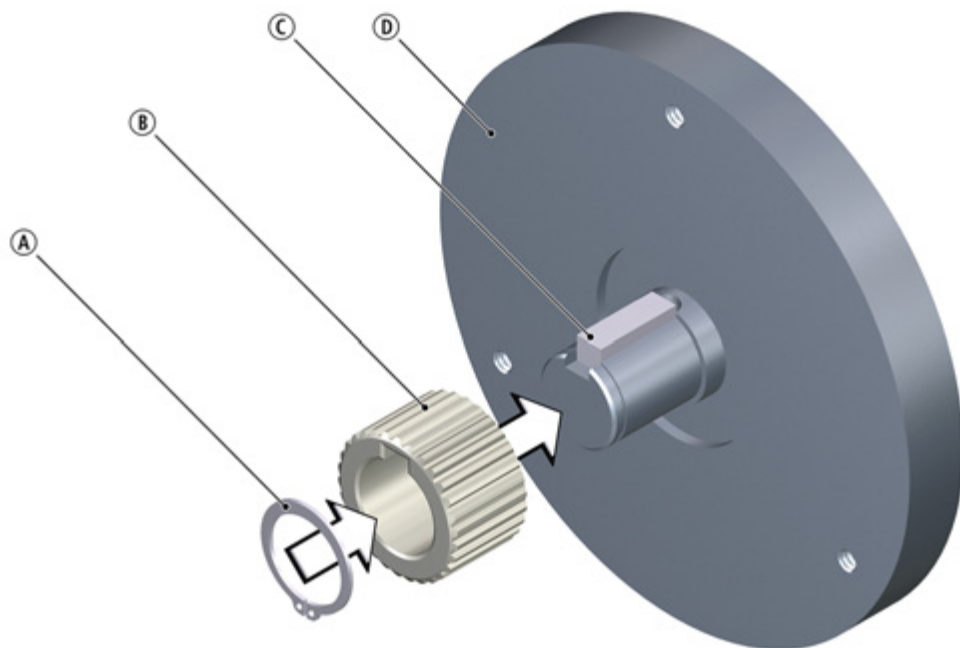

**Fig. 9: Installing the hub onto the shaft**

(A) Circlip

(B) Hub

(C) Key

(D) End shield

Note the following when mounting the hub on the brake:

- The supporting length of the key should be equal to the hub length chosen.
- The hub-side dimensioning of the key connection takes into account one million braking operations in reversing mode without additional operational loads (e.g. additional load spectra with engaged brake).
- We would be happy to advise you on the selection of suitable adhesives.
- If you have deviating operating conditions (e.g. additional load spectra with engaged brake), please contact INTORQ for the proper dimensioning of the hub-side key connection.

- Secure the hub against axial displacement after you install it (e.g. with a circlip).

**NOTICE**


If you are using the spring-applied brake for reverse operations, glue the hub to the shaft.

**NOTICE**

When using the spring-applied brake as a safety brake: Observe the information concerning the shaft-hub connection in section Applications with special safety requirements ("Safety Brake"), Page 14.

## 5.5 Mounting the brake

### Mounting the rotor (without friction plate / without brake flange)

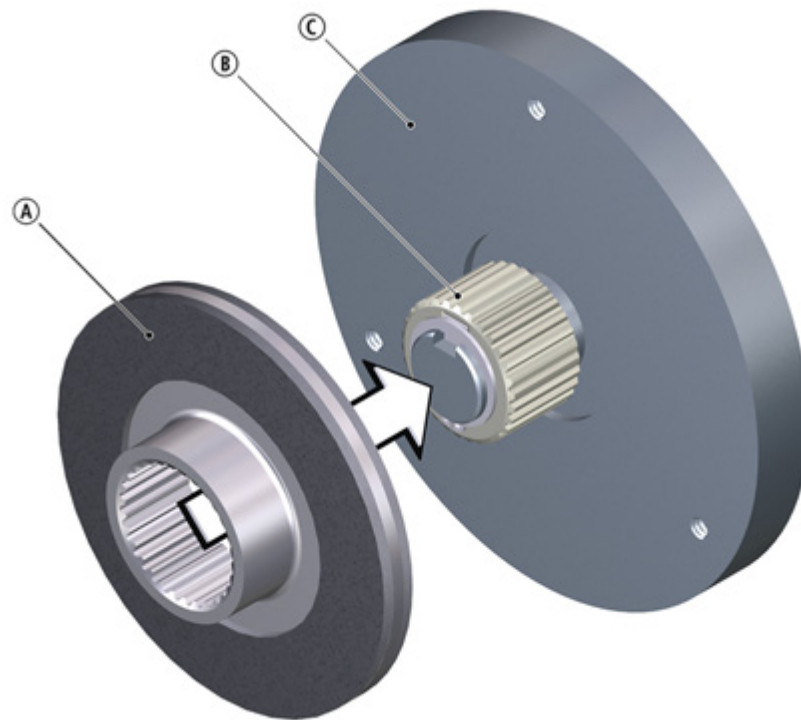


**Fig. 10: Assembly of the rotor**

Ⓐ Rotor

Ⓑ Hub

Ⓒ End shield


1. Push the rotor on the hub.
2. Check if the rotor can be moved manually.

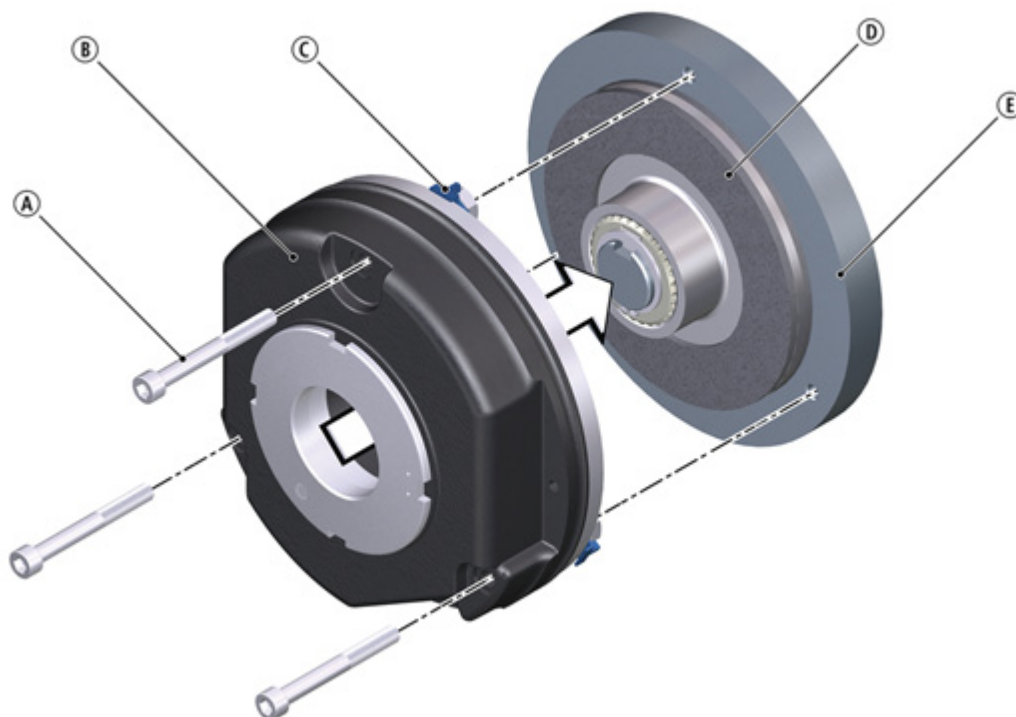

**Fig. 11: Mounting the complete stator**

- |                         |                    |                 |
|-------------------------|--------------------|-----------------|
| Ⓐ Socket head cap screw | Ⓑ Stator, complete | Ⓒ Terminal clip |
| Ⓓ Rotor                 | Ⓔ End shield       |                 |

3. Screw the complete stator to the end shield Use the supplied screw set and a torque wrench (for tightening torque, refer to the table Rated data: screw kit for brake assembly on separately screwed-on flange, Page 24 ).
4. Remove the terminal clips and dispose of properly.

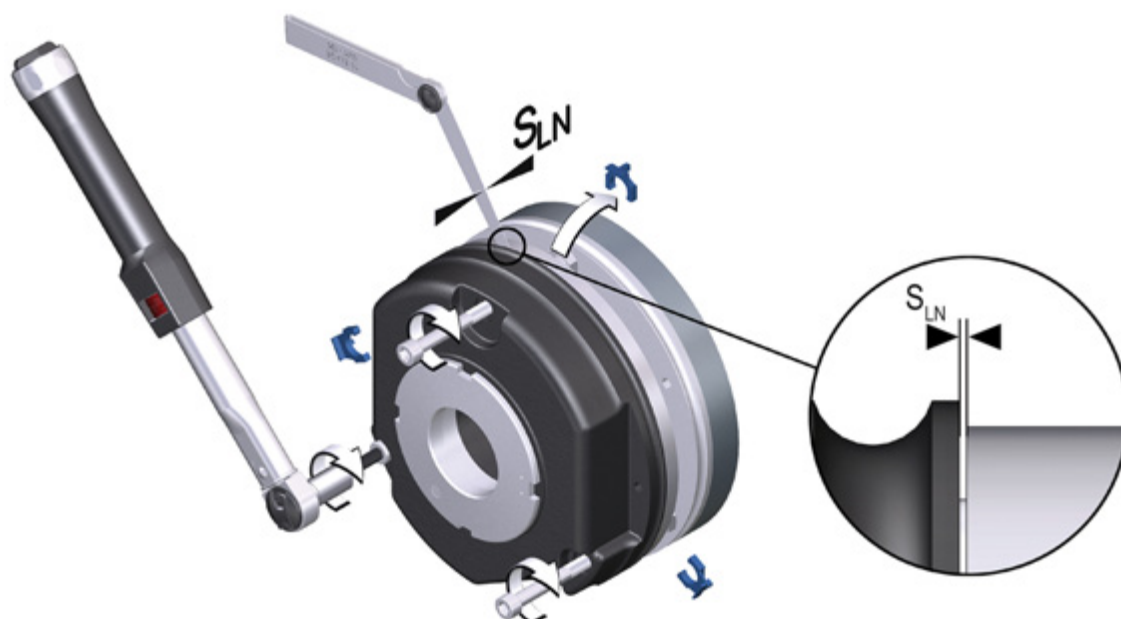


**Fig. 12: Tightening the screws with a torque wrench**

**Notice**

Do not push on the feeler gauge more than 10 mm between the armature plate and the stator!

5. Check the air gap near the screws using a feeler gauge. These values must match the specifications for  $s_{LN}$  found in the table Rated data for air gap specifications, Page 23.

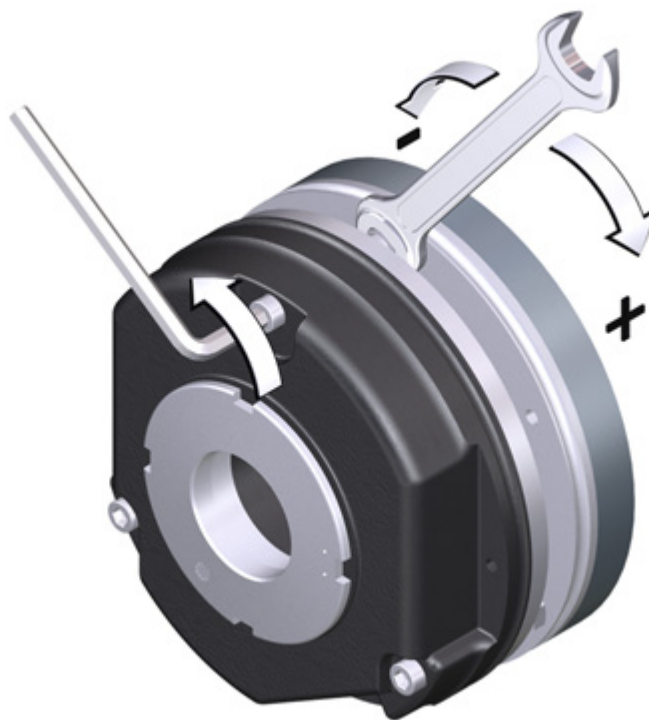

**Fig. 13: Adjusting the air gap**


6. If the measured value  $s_L$  is outside of the tolerance  $s_{LN}$ , readjust this dimension. Loosen the socket head cap screws slightly and adjust the air gap (turn the sleeve bolts using a wrench).
7. Use a torque wrench to tighten the socket head cap screws (refer to the Figure Tightening the screws with a torque wrench, Page 39).

**NOTICE**

Tightening torques: refer to the table Rated data: screw kit for brake assembly on separately screwed-on flange, Page 24.



## 5.6 Installing the friction plate (optional)

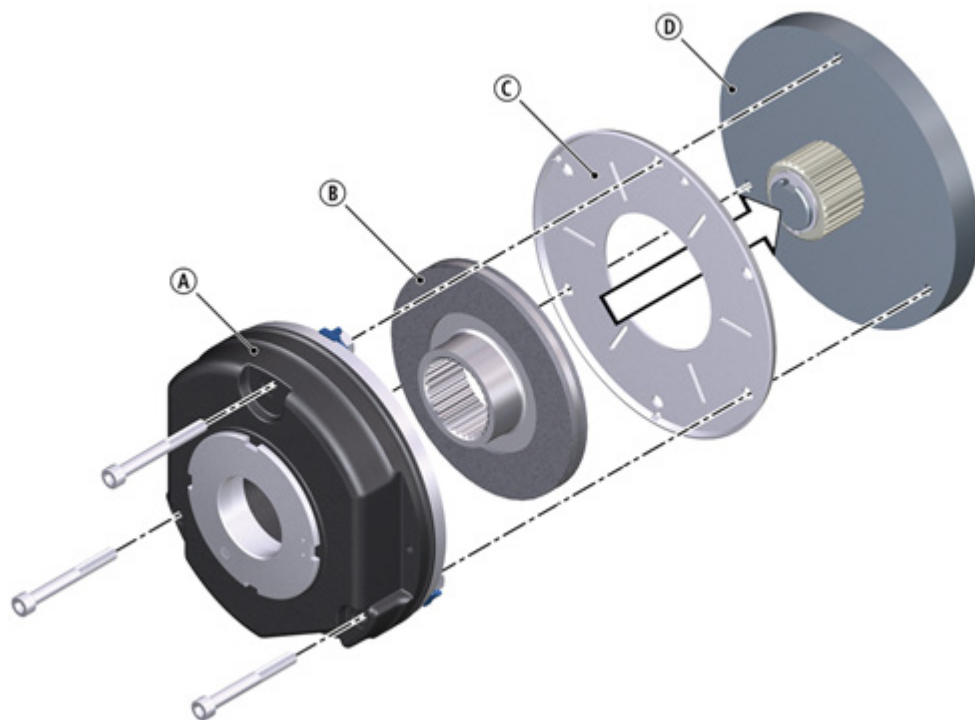

**Fig. 14: Mounting the friction plate**

- ☐ (A) Stator
 ☐ (B) Rotor
 ☐ (C) Friction plate
 ☐ (D) End shield

1. Place the friction plate against the end shield. The lip edging of the friction plate must remain visible!
2. Align the hole circle along the screw-in holes.

## 5.7 Mounting the flange

### 5.7.1 Mounting the flange without additional screws



## NOTICE

When dimensioning the thread depth in the end shield, be sure to take into account the permissible wear distance (refer to Table Rated data for air gap specifications, Page 23).

1. Place the flange against the end shield.
2. Align the hole circle along the screw-in holes.
3. Mount the brake using the appropriate set of screws (refer to the figures in the chapters Mounting the brake, Page 38 and Spare parts list, Page 68 ).


### 5.7.2 Installing the flange (variants: size 06 - 16)

The flange can be screwed to the end shield on the outer hole circle (for screw dimensioning, refer to the table Rated data: screw kit for brake assembly on separately screwed-on flange, Page 24).



#### NOTICE

Clearing holes for the screws in the end shield must be behind the threaded screw holes in the flange. Without the clearing holes, the minimal rotor thickness cannot be used. The screws must not press against the end shield.

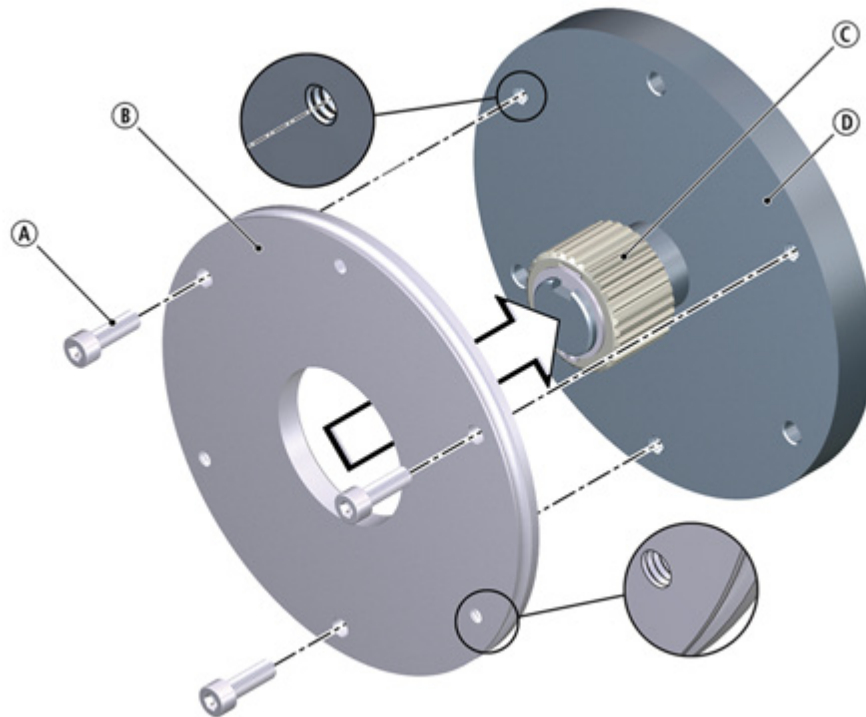

**Fig. 15: Flange mounting for sizes 06 - 16**

Ⓐ Screw <sup>1)</sup>

Ⓑ Flange

Ⓒ Hub

Ⓓ End shield

<sup>1)</sup> According to the table Rated data: screw kit for brake assembly on separately screwed-on flange, Page 24

1. Make sure that there are clearing holes in the end shield at the positions of the screws in the stator (for these free hole depths, refer to the table Rated data: screw kit for brake assembly on separately screwed-on flange, Page 24).
2. Place the flange against the end shield.



#### NOTICE

Tighten the screws evenly (for tightening torques, refer to the table Rated data: screw kit for brake assembly on separately screwed-on flange, Page 24 ).

3. Use the three screws to screw the flange to the end shield.


4. Check the height of the screw heads. The screw heads must not be higher than the minimum rotor thickness. Use screws that comply with the information in the table Rated data: screw kit for brake assembly on separately screwed-on flange, Page 24.


**Notice**

When mounting the flange, the various size classes must be distinguished: sizes 06 – 16, 18 – 20 and 25 are mounted differently.

### 5.7.3 Installing the flange (variants: size 18 - 20)

The flange can be screwed to the end shield onto the outer hole circle (refer to the table Rated data: screw kit for brake assembly on separately screwed-on flange, Page 24).

NOTICE	
	<ul style="list-style-type: none"> <li>■ Clearing holes for the screws in the end shield must be behind the threaded screw holes in the flange. Without the clearing holes, the minimal rotor thickness cannot be used. The screws must not press against the end shield.</li> <li>■ For sizes 18 and 20, the mounting surface threading must be angled at 30° to the center axis to the hand-release lever.</li> </ul>

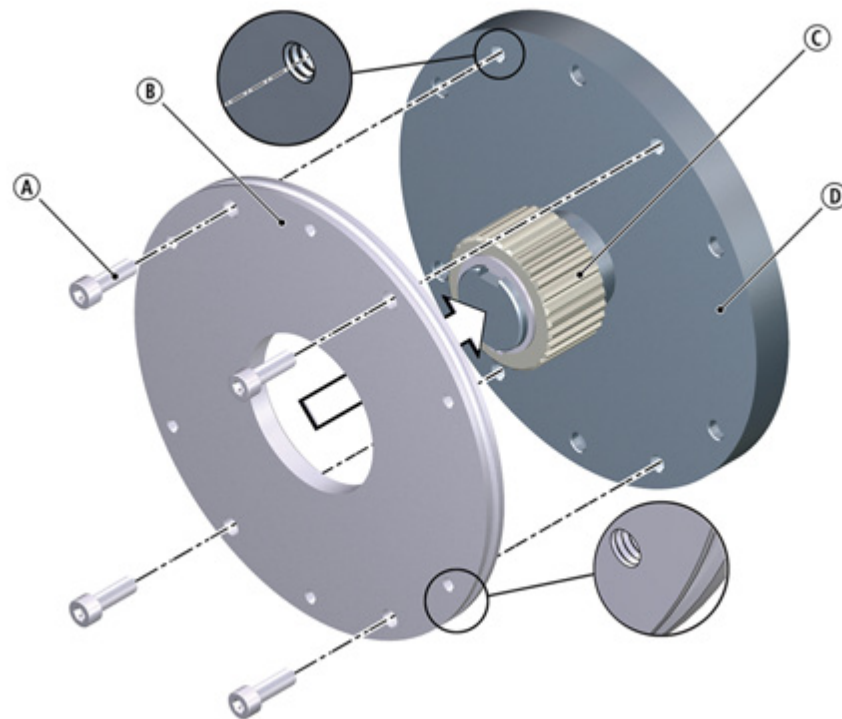

**Fig. 16: Flange mounting for sizes 18 – 20**

Ⓐ Screw <sup>1)</sup>

Ⓑ Flange

Ⓒ Hub

Ⓓ End shield

<sup>1)</sup> According to the table Rated data: screw kit for brake assembly on separately screwed-on flange, Page 24

1. Place the flange against the end shield.

**NOTICE**

Tighten the screws evenly (for tightening torques, refer to the table Rated data: screw kit for brake assembly on separately screwed-on flange, Page 24 ).


2. Use the four screws to screw the flange to the end shield.
3. Check the height of the screw heads. The screw heads must not be higher than the minimum rotor thickness. Use screws that comply with the information in the table Rated data: screw kit for brake assembly on separately screwed-on flange, Page 24.

#### 5.7.4 Installing the flange (variants: size 25)

The flange can be screwed to the end shield onto the outer hole circle (refer to the table Rated data: screw kit for brake assembly on separately screwed-on flange, Page 24).

**NOTICE**

- Clearing holes for the screws in the end shield must be behind the threaded screw holes in the flange (refer to the table Rated data: screw kit for brake assembly on separately screwed-on flange, Page 24). Without the clearing holes, the minimal rotor thickness cannot be used. The screws must not press against the end shield.

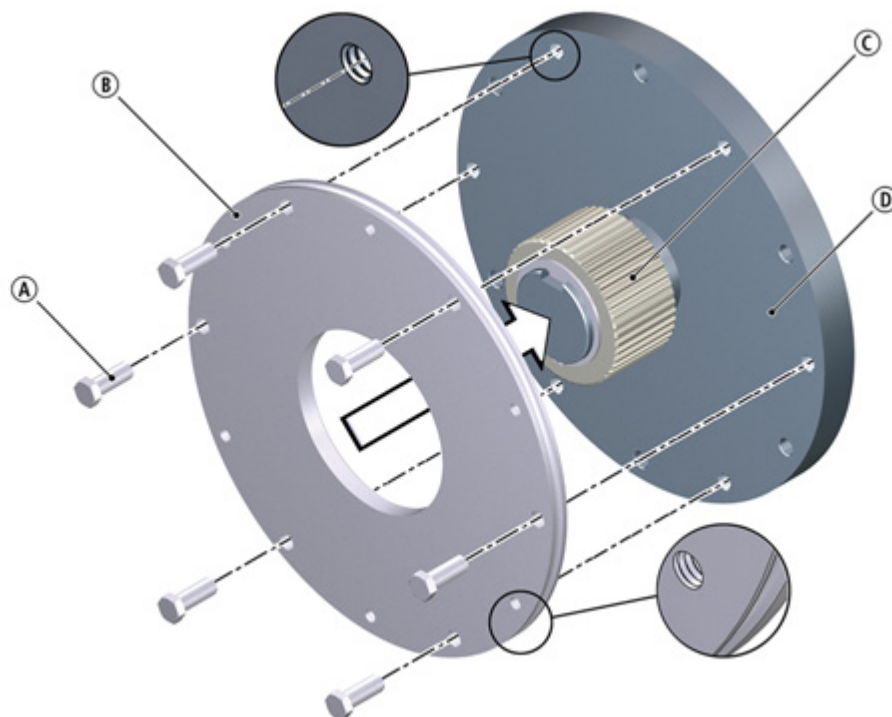

**Fig. 17: Flange mounting for size 25**

(A) Hex screw <sup>1)</sup>

(B) Flange

(C) Hub

(D) End shield


<sup>1)</sup> According to the table Rated data: screw kit for brake assembly on separately screwed-on flange, Page 24

1. Place the flange against the end shield.
2. Use the six screws to screw the flange to the end shield.
3. Check the height of the screw heads. The screw heads must not be higher than the minimum rotor thickness.

**NOTICE**

Tighten the screws evenly (for tightening torques, refer to the table Rated data: screw kit for brake assembly on separately screwed-on flange, Page 24 ).

## 5.8 Installing the double spring-applied brake

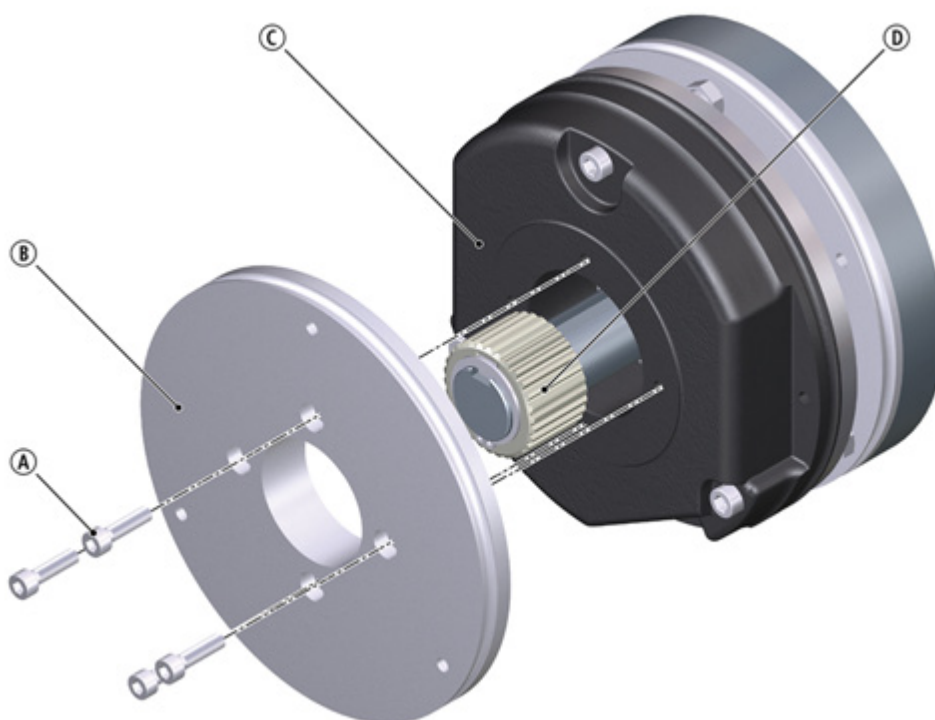

**Fig. 18:** Installing the intermediate flange

- (A) Screw from the screw set      (B) Intermediate flange      (C) Rear stator  
 (D) Front hub

**NOTICE**

When installing the double spring-applied brake, use screws of the required strength class. Install them using the tightening torque specified in the table for the screw kit for intermediate flange mounting for double spring-applied brakes as well as the table Rated data: screw kit for brake assembly on separately screwed-on flange, Page 24 (in the column "Screw kit for mounting on flange").

**Notice**

Requirements:

- The first hub has to be mounted on the shaft!
- The first brake must be completely mounted!
- The air gap must be set!


1. Mount the intermediate flange with the four screws in the threads of the first magnet housing.

All other steps for mounting the second brake are carried out as described in the section Mounting the brake, Page 38.

**NOTICE**

With the double spring-applied brake design, when working with braking torques which are greater than the standard braking torque, you need to check the screws connecting the first brake. Please consult with INTORQ first!

## 5.9 Cover ring assembly

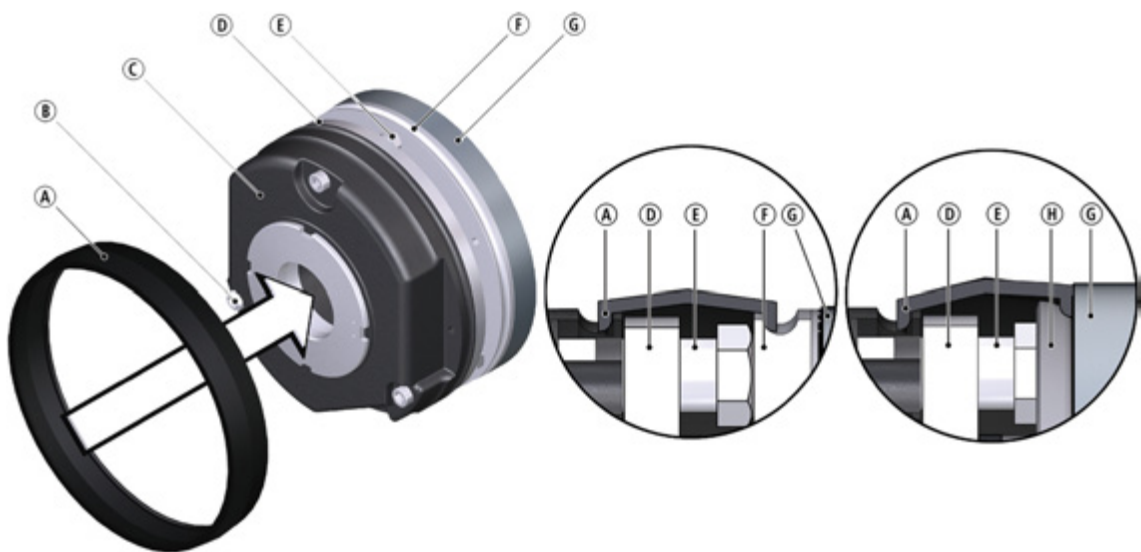

**Fig. 19: Cover ring assembly**

- |                  |                         |          |
|------------------|-------------------------|----------|
| Ⓐ Cover ring     | Ⓑ Socket head cap screw | Ⓒ Stator |
| Ⓓ Armature plate | Ⓔ Sleeve bolt           | Ⓕ Flange |
| Ⓔ End shield     | Ⓕ Friction plate        |          |

**NOTICE**

The cover ring may only be used in conjunction with a flange or friction plate!

1. Pull the cables through the cover ring.
2. Slide the cover ring over the stator.



3. Press the corresponding lips of the cover ring in the groove of the stator and in the groove of the flange. If a friction plate is used, the lip must be pulled over the edging.


## 5.10 Installing the shaft sealing ring



### NOTICE

When using a shaft sealing ring, the brake has to be mounted so that it is centred properly!

The shaft diameter must be implemented in accordance with ISO tolerance h11, with a radial eccentricity tolerance according to IT8 and an averaged surface roughness of  $R_z \leq 3.2 \mu\text{m}$  in the sealing area.

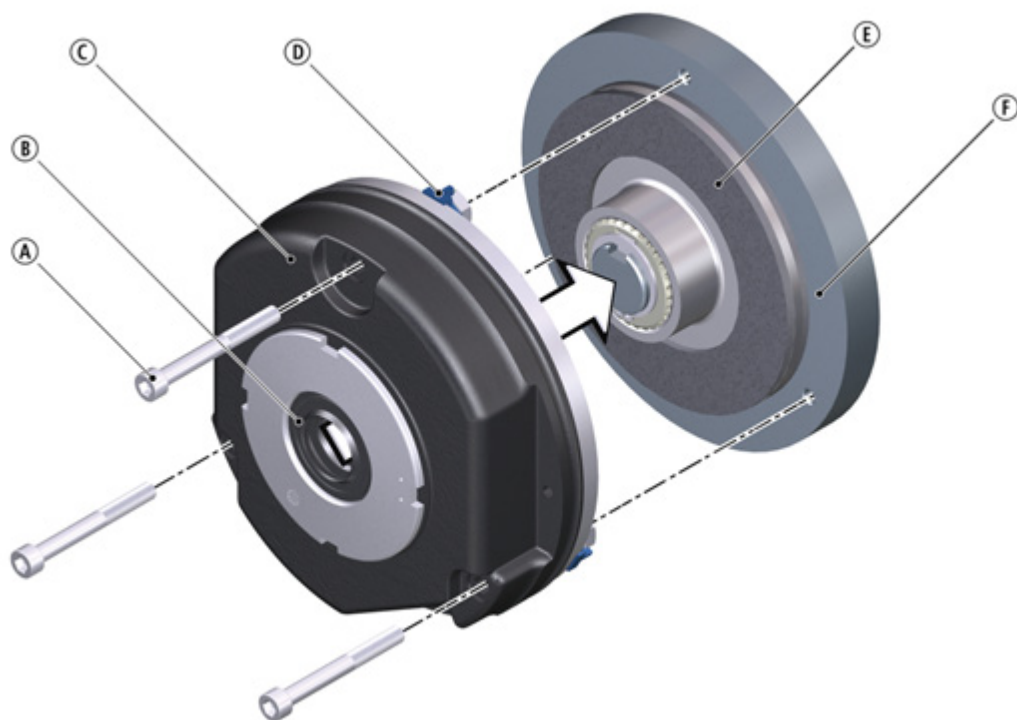

**Fig. 20:** Installing the shaft sealing ring

- |                           |                        |                      |
|---------------------------|------------------------|----------------------|
| (A) Socket head cap screw | (B) Shaft sealing ring | (C) Stator, complete |
| (D) Terminal clip         | (E) Rotor              | (F) End shield       |



### Notice

Please note the following for the version "brake with shaft sealing ring":

- Lightly lubricate the lip of the shaft sealing ring with grease.
- No grease should be allowed to contact the friction surfaces.
- When assembling the stator, push the shaft sealing ring carefully over the shaft. The shaft should be located concentrically to the shaft sealing ring

## 5.11 Installing the hand-release (retrofitting)

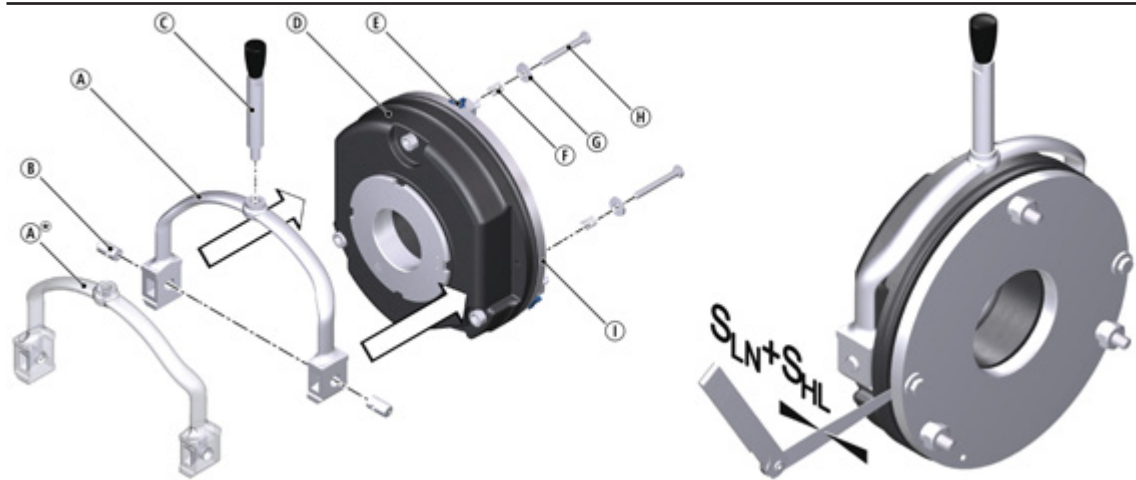


Fig. 21: Assembly of the hand-release BFK458

- |                           |                                       |                    |
|---------------------------|---------------------------------------|--------------------|
| (A) Yoke (standard mount) | (A) * Yoke (rotated mount - optional) | (B) Pin            |
| (C) Lever                 | (D) Stator                            | (E) Terminal clip  |
| (F) Pressure spring       | (G) Washer                            | (H) Hex head screw |
| (I) Armature plate        |                                       |                    |

1. Insert pin into the bores of the yoke.
2. Insert the pressure springs in the bores of the armature plate.
3. Push the hex head screws through the pressure springs in the armature plate and through the bore hole in the stator.
4. Screw the hex head screws into the yoke pins.
5. Tighten the hex head screws to fasten the armature plate against the stator.
6. Remove the terminal clips and dispose of properly.



### NOTICE

Note that the gap  $s_{LN}$  can only be set after the brake is mounted.


Measure the air gap in the immediate vicinity of the hexagon screws; otherwise measurement errors can occur because the armature plate is not plane-parallel to the pole face!


7. Set the gap  $s_{LN} + s_{HL}$  evenly using the hex head screws and the feeler gauge. Refer to the table Adjustment setting for hand-release, Page 32 for the values for the dimension  $s_{LN} + s_{HL}$ .



## 6 Electrical installation


### Important notices and information

	<b>⚠ DANGER</b>
	<p><b>There is a risk of injury by electrical shock!</b></p> <ul style="list-style-type: none"><li>■ The electrical connections may only be made by trained electricians!</li><li>■ Make sure that you switch off the electricity before working on the connections! There is a risk of unintended start-ups or electric shock.</li></ul>

	<b>NOTICE</b>
	<p>Make sure that the supply voltage matches the voltage specification on the name plate.</p>

### 6.1 Electrical connection

#### Switching suggestions

	<b>NOTICE</b>
	<p>The terminal pin sequence shown here does not match the actual order.</p>

## 6.2 AC switching at the motor – extremely delayed engagement

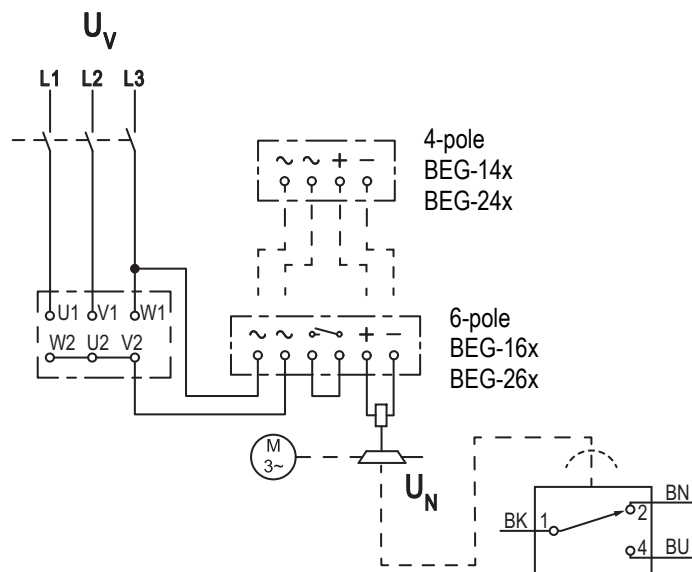


Fig. 22: Supply: Phase-neutral

Bridge rectifiers

$$\text{BEG-1xx: } U_N [\text{V DC}] = 0.9 \cdot \frac{U_V}{\sqrt{3}} [\text{V AC}]$$

Half-wave rectifiers

$$\text{BEG-2xx: } U_N [\text{V DC}] = 0.45 \cdot \frac{U_V}{\sqrt{3}} [\text{V AC}]$$

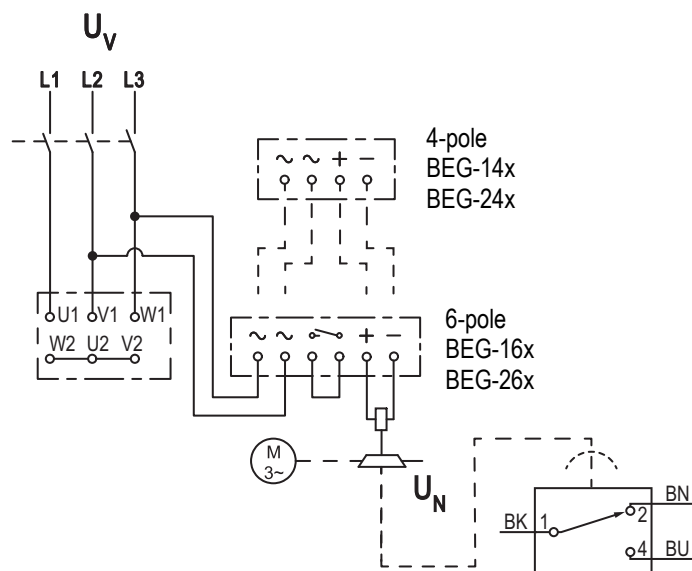


Fig. 23: Supply: Phase-phase

Bridge rectifier <sup>1)</sup>

$$\text{BEG-1xx: } U_N [\text{V DC}] = 0.9 \cdot U_V [\text{V AC}]$$

Half-wave rectifiers

$$\text{BEG-2xx: } U_N [\text{V DC}] = 0.45 \cdot U_V [\text{V AC}]$$

<sup>1)</sup> Not recommended for most regional/national high-voltage mains voltages.

### 6.3 DC switching at the motor – fast engagement

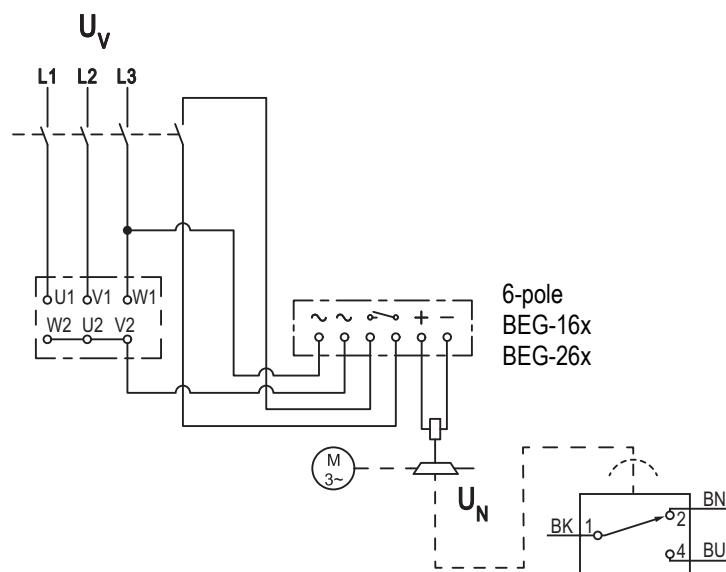


Fig. 24: Supply: Phase-neutral

Bridge rectifiers

$$\text{BEG-1xx: } U_N [\text{V DC}] = 0.9 \cdot \frac{U_V}{\sqrt{3}} [\text{V AC}]$$

Half-wave rectifiers

$$\text{BEG-2xx: } U_N [\text{V DC}] = 0.45 \cdot \frac{U_V}{\sqrt{3}} [\text{V AC}]$$

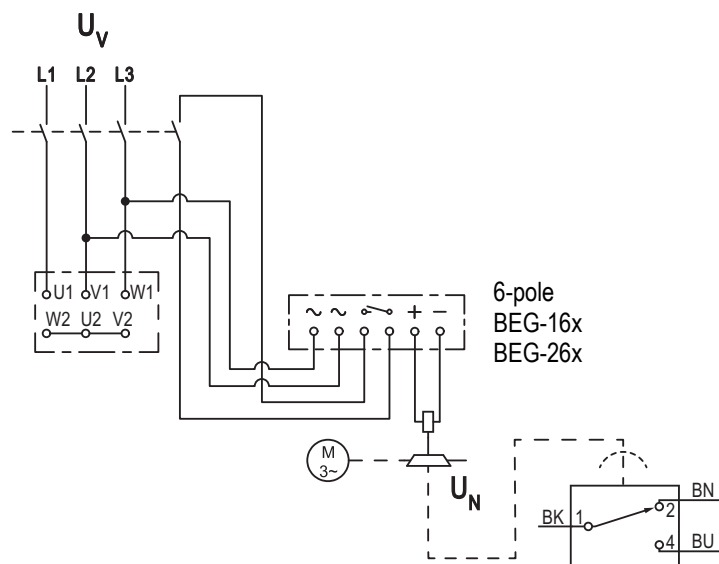


Fig. 25: Supply: Phase-phase

Bridge rectifier <sup>1)</sup>

$$\text{BEG-1xx: } U_N [\text{V DC}] = 0.9 \cdot U_V [\text{V AC}]$$

Half-wave rectifiers

$$\text{BEG-2xx: } U_N [\text{V DC}] = 0.45 \cdot U_V [\text{V AC}]$$

<sup>1)</sup> Not recommended for most regional/national high-voltage mains voltages.

## 6.4 AC switching at mains – delayed engagement

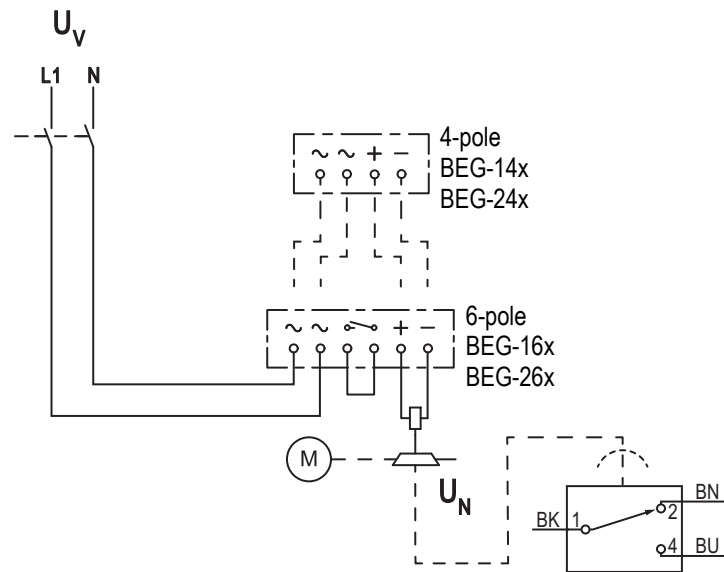


Fig. 26: Supply: Phase-N

Bridge rectifiers

$$\text{BEG-1xx: } U_N [\text{V DC}] = 0.9 \cdot U_V [\text{V AC}]$$

Half-wave rectifiers

$$\text{BEG-2xx: } U_N [\text{V DC}] = 0.45 \cdot U_V [\text{V AC}]$$

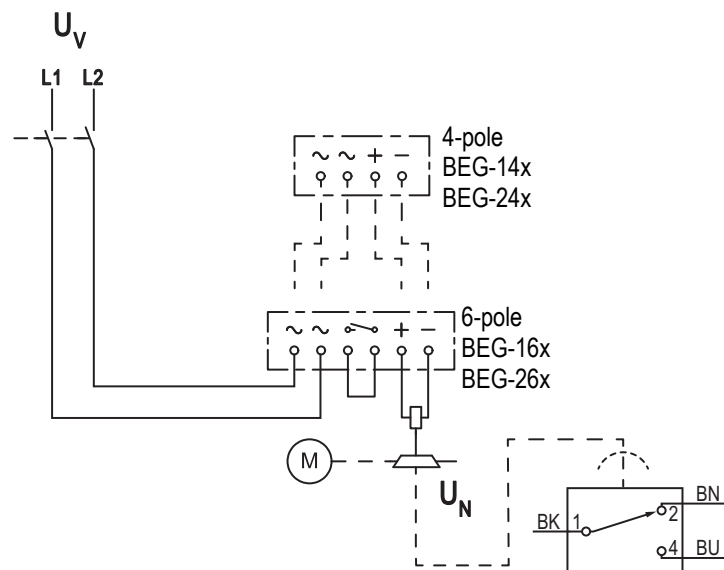


Fig. 27: Supply: Phase-phase

Bridge rectifier <sup>1)</sup>

$$\text{BEG-1xx: } U_N [\text{V DC}] = 0.9 \cdot U_V [\text{V AC}]$$

Half-wave rectifiers

$$\text{BEG-2xx: } U_N [\text{V DC}] = 0.45 \cdot U_V [\text{V AC}]$$

<sup>1)</sup> Not recommended for most regional/national high-voltage mains voltages.

## 6.5 DC switching at mains – fast engagement

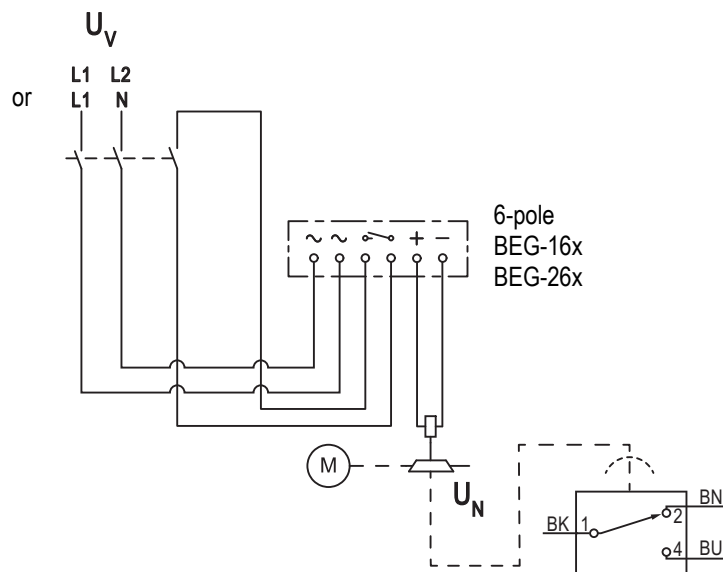


Fig. 28: Supply: Phase-phase or phase-N via 6-pole rectifier

Bridge rectifier <sup>1)</sup>

$$\text{BEG-16x: } U_N [\text{V DC}] = 0.9 \cdot U_V [\text{V AC}]$$

Half-wave rectifiers

$$\text{BEG-26x: } U_N [\text{V DC}] = 0.45 \cdot U_V [\text{V AC}]$$

<sup>1)</sup> For most regional/national high-voltage mains voltages, this only makes sense for supplies on L1 and N.

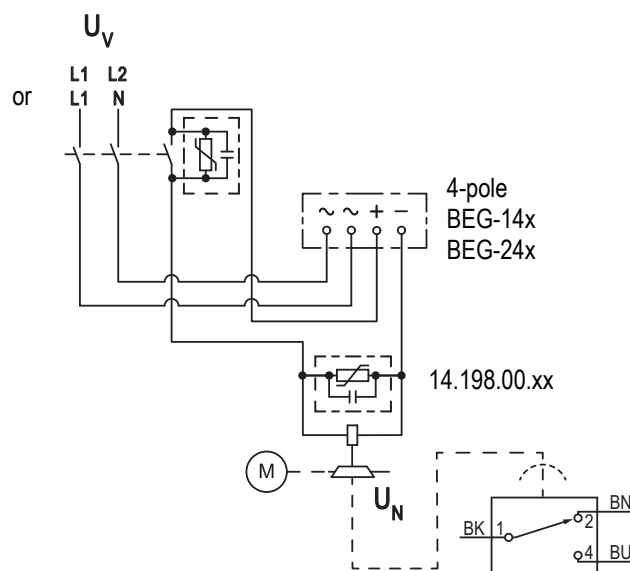


Fig. 29: Supply: Phase-phase or phase-N via 4-pole rectifier

Bridge rectifier <sup>1)</sup>

$$\text{BEG-14x: } U_N [\text{V DC}] = 0.9 \cdot U_V [\text{V AC}]$$

Half-wave rectifiers

$$\text{BEG-24x: } U_N [\text{V DC}] = 0.45 \cdot U_V [\text{V AC}]$$

Spark suppressor:

14.198.00.xx (required once, select position)

<sup>1)</sup> For most regional/national high-voltage mains voltages, this only makes sense for supplies on L1 and N.

## 6.6 Minimum bending radius for the brake connection line

Size	Wire cross-section	Minimum bending radius
06	AWG 20	27.5 mm
08		
10		
12		
14		
16		45.6 mm
18		
20		
25		

Tab. 13: Minimum bending radius for the brake connection cable


## 6.7 Technical specifications for the micro-switch

The brake can be equipped with a micro-switch for monitoring the release or wear. The micro-switch can be integrated into the circuit as an NO or NC contact.

As of June 2012, a new small micro-switch (with UL acceptance) is in use, which is perfectly adapted to the contour of the brake. The old switch design can be converted by connecting an adapter to the same threaded holes.

Design	Micro-switch
3-pole connecting cable	3 x 0.34 mm <sup>2</sup> (AWG22) black / brown / blue
	D = 4.8 mm, black, CSA Style 2517/105° Length: 1000 mm
Contacts	Silver
Current carrying capacity 250 V AC	Max. 3 A
Current carrying capacity 30 V DC	Max. 3 A
Minimum load at 24 V DC	10 mA
Temperature range:	-40 °C to +85 °C
Protection class	IP67

Tab. 14: Technical specifications for the micro-switch

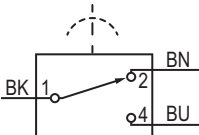	Switching states	$s_L = 0$	$s_{LN}$	$s_{Lmax} (-0.1)$
	Check of air gap	1 - 4	1 - 2	1 - 2
	Monitoring wear	1 - 4	1 - 4	1 - 2

Tab. 15: Switching states of the mechanical micro-switches

## 6.8 Bridge/half-wave rectifier (optional)

### BEG-561-□□□-□□□

The bridge-half-wave rectifiers are used to supply electromagnetic DC spring-applied brakes which are approved for use with such rectifiers. Other use is only permitted with the approval of INTORQ.

Once a set overexcitation period has elapsed, the bridge-half-wave rectifiers switch over from bridge rectification to half-wave rectification.

Terminals 3 and 4 are in the DC circuit of the brake. The induction voltage peak for DC switching (refer to the circuit diagram DC switching at the motor – fast engagement, Page 51) is limited by an integrated overvoltage protection at terminals 5 and 6.

### 6.8.1 Assignment: Bridge/half-wave rectifier – brake size

Rectifier type	Supply voltage	Overexcitation		Holding current reduction	
	[V AC]	Coil voltage [V DC]	Size	Coil voltage [V DC]	Size
BEG-561-255-030	230	103	06 – 25	205	06 – 14
BEG-561-255-130			-		16 – 25
BEG-561-440-030-1	400	180	06 – 25	-	-

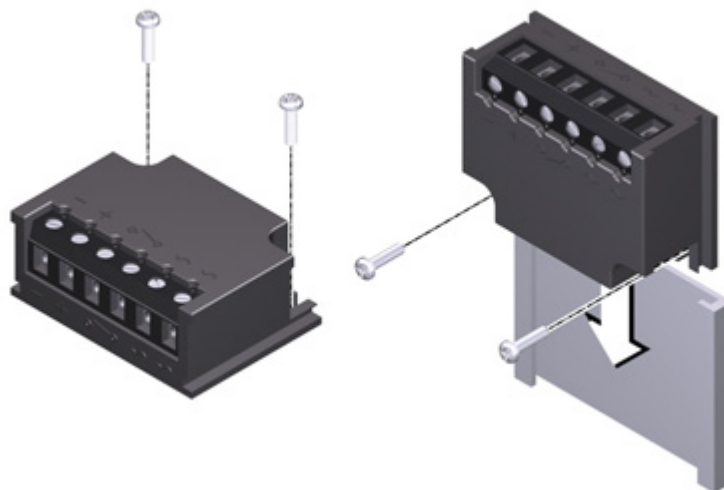


Fig. 30: BEG-561 fastening options

### 6.8.2 Technical specifications


Rectifier type	Bridge / half-wave rectifier
Output voltage for bridge rectification	$0.9 \times U_1$
Output voltage for half-wave rectification	$0.45 \times U_1$
Ambient temperature (storage/operation) [°C]	-25 – +70
$U_1$ input voltage (40 – 60 Hz)	

Type	Input voltage $U_1$ (40 Hz – 60 Hz)			Max. current $I_{\max}$		Overexcitation period $t_{ue}$ ( $\pm 20\%$ )		
	Min.	Rated	Max.	Bridge	half-wave	at $U_{1\min}$	at $U_{1\text{Nom}}$	at $U_{1\max}$
	[V~]	[V~]	[V~]	[A]	[A]	[s]	[s]	[s]
BEG-561-255-030	160	230	255	3.0	1.5	0.430	0.300	0.270
BEG-561-255-130						1.870	1.300	1.170
BEG-561-440-030-1	230	400	440	1.5	0.75	0.500	0.300	0.270
BEG-561-440-130				3.0	1.5	2,300	1.300	1.200

Tab. 16: Data for bridge/half-wave rectifier type BEG-561

### 6.8.3 Reduced switch-off times

AC switching must also be carried out for the mains supply side switching (fast engagement)! Otherwise, there will be no overexcitation when it is switched back on.

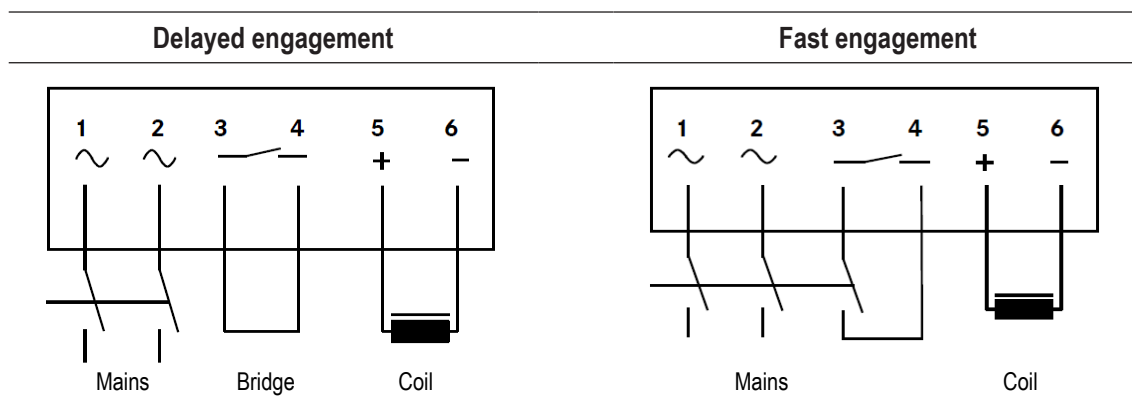

### 6.8.4 Permissible current load at ambient temperature

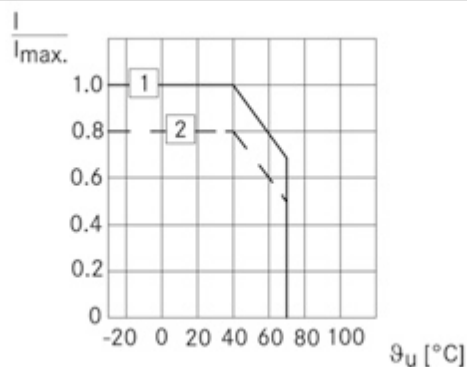



Fig. 31: Permissible current load

- ① If screwed to metal surface (good heat dissipation)
- ② For other installations (e.g. with adhesive)




## 7 Commissioning and operation


### Possible applications of the INTORQ spring-applied brake

	NOTICE
	<p>In case of high humidity: If condensed water and moisture are present, provide for the appropriate ventilation for the brake to ensure that all friction components dry quickly.</p> <p>At high humidity and low temperatures: Take measures to ensure that the armature plate and rotor do not freeze.</p>

### 7.1 Protect the electrical connections against any contact or touching.

#### Important notices and information

	⚠ DANGER
	<p><b>Danger: rotating parts!</b></p> <ul style="list-style-type: none"> <li>■ The brake must be free of residual torque.</li> <li>■ The drive must not be running when checking the brake.</li> </ul>

	⚠ DANGER
	<p><b>There is a risk of injury by electrical shock!</b></p> <p>The live connections must not be touched.</p>

- The brake is designed for operation under the environmental conditions that apply to IP54 protection. Because of the numerous possibilities of using the brake, it is still necessary to check the functionality of all mechanical components under the corresponding operating conditions.



#### Notice

##### Functionality for different operating conditions

- The brakes are dimensioned in such a way that the specified rated torques are reached safely after a short run-in process.
- However, as the organic friction linings used do not all have identical properties and because environmental conditions can vary, deviations from the specified braking torques are possible. These must be taken into account in the form of appropriate dimensioning tolerances. Increased breakaway torque is common, in particular after long downtimes in humid environments where temperatures vary.



#### Notice

##### Operation without dynamic loads (functioning as a pure holding brake)

- If the brake is used as a pure holding brake without dynamic load, the friction lining must be reactivated regularly.


## 7.2 Function checks before initial commissioning

### 7.2.1 Function check of the brake

If a fault or malfunction arises during the function check, you can find important information for troubleshooting in the chapter [Troubleshooting and fault elimination, Page 71](#). If the fault cannot be fixed or eliminated, please contact your customer service.

### 7.2.2 Release / voltage control

1. Switch off the supply to the motor and brake securely.
2. When switching on the brake supply, make sure that the motor DOES NOT start up (e.g. remove the two bridges on the motor terminals).
  - **Do not** disconnect the supply connections to the brake.
  - If the rectifier for the brake supply is connected to the neutral point of the motor, **also** connect the neutral conductor to this connection.

	<b>! DANGER</b>
	<p><b>Danger: rotating parts!</b></p> <p>Your system should be mechanically immobilized in the event that it could start moving when the brake is released.</p>

3. Micro-switch option - release monitoring: Check that the switching state is correct on the micro-switch: the brake is applied.
4. Micro-switch option - wear monitoring: Check that the switching state is correct on the micro-switch: the brake is NOT worn.
5. Switch the power on.
6. Measure the DC voltage at the brake.
  - Compare the measured voltage to the voltage specified on the name plate. A deviation of up to 10% is permitted.
  - When using bridge/half-wave rectifiers: After switching to one-way voltage, the measured DC voltage may drop to 45% of the voltage specified on the name plate.
7. Micro-switch option - release monitoring: Check that the switching state is correct on the micro-switch: the brake is released.
8. Check the air gap  $s_L$ . The air gap must be zero and the rotor must rotate freely.
9. Switch off the supply to the motor and brake securely.
10. Connect the bridges to the motor terminals. Remove any extra neutral conductor.
11. Micro-switch option - wear monitoring: Adjust the air gap to  $s_{Lmax}$  (refer to the figure [Adjusting the air gap, Page 40](#)).
12. Micro-switch option - wear monitoring: Check that the switching state is correct on the micro-switch: the brake is worn.
13. Adjust the air gap to  $s_{LN}$ .
14. If necessary, deactivate mechanical shutdown of the system.

## 7.2.3 Testing the hand-release functionality

**NOTICE**

This operational test must also be carried out!

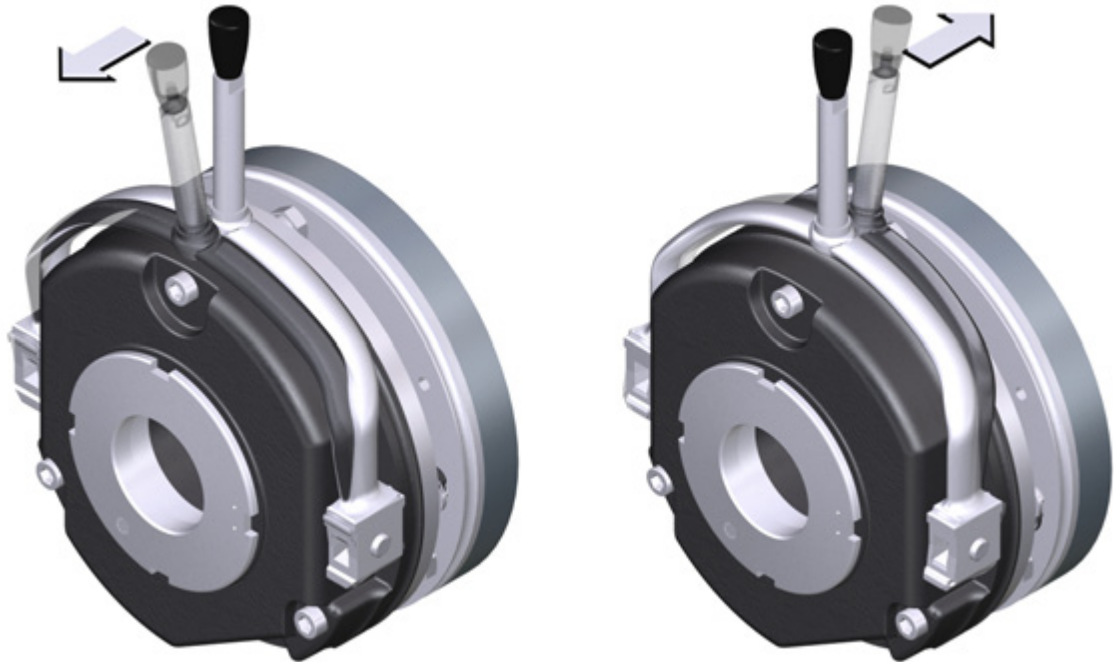



Fig. 32: Turning direction of the lever

Size	Hand force [N] Standard braking torque	Hand force [N] Maximum braking torque
06	20	30
08	35	50
10	55	75
12	90	120
14	130	170
16	150	230
18	220	250*
20	260	330*
25	270	350*

Tab. 17: Actuating forces

\* When used with a long lever

1. Make sure that the motor and brake are de-energized.
2. Pull (with some force) on the lever until the force increases sharply.
  - The rotor must now rotate freely. A small residual torque is permissible.

	<b>NOTICE</b>
	<ul style="list-style-type: none"> <li>■ Make sure that the brake is not subject to excessive force.</li> <li>■ Do not use auxiliary tools (e.g. extension pipes) to facilitate the air release. Auxiliary tools are not permitted and are not considered as proper and intended usage.</li> </ul>

3. Release the lever.
  - A sufficient torque must build up immediately!


**Notice**


If faults occur, refer to the error search table ([Troubleshooting and fault elimination, Page 71](#)). If the fault cannot be fixed or eliminated, please contact the customer service department.

## 7.3 Commissioning

1. Switch on your drive system.
2. Perform a test braking procedure; if necessary, reduce the braking torque (depending on your specifications and requirements)

## 7.4 Operation

	<b>⚠ DANGER</b>
	<p><b>Danger: rotating parts!</b></p> <ul style="list-style-type: none"> <li>■ The running rotor must not be touched.</li> <li>■ Take structural design measures on your final product and implement organizational safety rules to ensure that nobody can touch a rotor.</li> </ul>

	<b>⚠ DANGER</b>
	<p><b>There is a risk of injury by electrical shock!</b></p> <ul style="list-style-type: none"> <li>■ Live connections must not be touched.</li> <li>■ Take structural design measures on your final product and implement organizational safety rules to ensure that nobody can touch a connection.</li> </ul>

- Checks must be carried out regularly. Pay special attention to:
  - unusual noises or temperatures
  - loose fixing/attachment elements
  - the condition of the electrical cables.

- While current is being applied to the brake, make sure that the armature plate is completely tightened and the drive moves without residual torque.
- Measure the DC voltage at the brake. Compare the measured DC voltage with the voltage indicated on the name plate. The deviation must be less than  $\pm 10\%$ !
- When using bridge/half-wave rectifiers: After switching to one-way voltage, the measured DC voltage may drop to 45% of the voltage specified on the name plate.

#### 7.4.1 Brake torque reduction (for the optional adjustable braking torque)

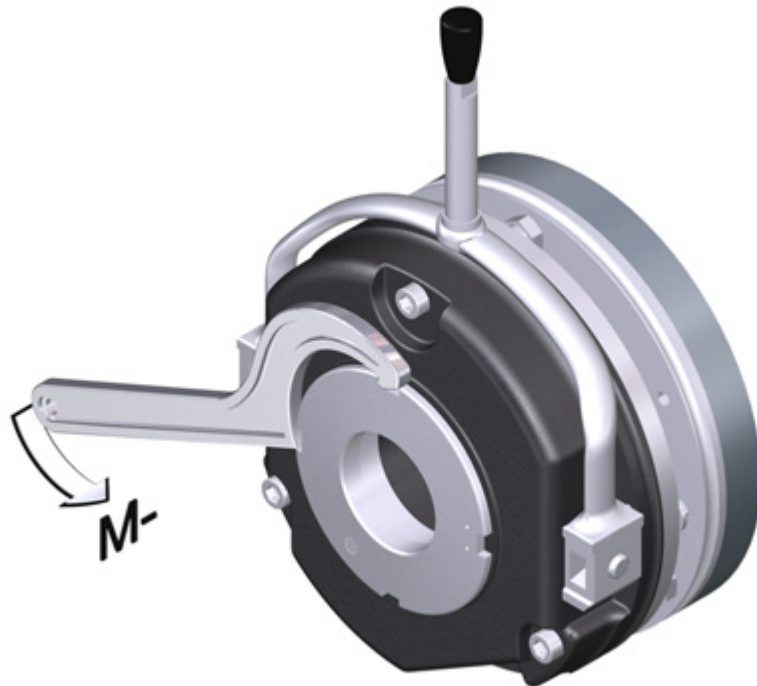


Fig. 33: Reducing the braking torque

1. Use a hook wrench to turn the torque adjustment ring counter-clockwise. This reduces the braking torque.
  - Note the correct position of the tappet notches on the torque adjustment ring: Only the latched-in positions are permitted. It is forbidden to operate the brake when the notches are adjusted between these latched-in positions! (Refer to chapter [Brake torques](#), [Page 21](#) for the values for the braking torque reduction for each latched-in position.)
  - Observe the max. permissible protrusion ( $h_{E_{max}}$ ) of the torque adjustment ring over the stator. (Refer to the table [Rated data for braking torques, depending on the speed and permissible limiting speeds](#), [Page 23](#) for values of  $h_{E_{max}}$ .)




#### **⚠ DANGER**

The reduction of the braking torque does not increase the maximum permissible air gap  $s_{L_{max}}$ . Do not change the hand-release setting for designs with hand-release. Increasing the braking torque by screwing in the torque adjustment ring is only permitted up to the default (as delivered) torque value.

## 8 Maintenance and repair

### 8.1 Wear of spring-applied brakes

	<b>! WARNING</b>
	<b>Braking torque reduction</b> The system must <b>not</b> be allowed to continue operations after the maximum air gap $s_{Lmax}$ has been exceeded. Exceeding the maximum air gap can cause a major reduction in the braking torque!

The table below shows the different causes of wear and their impact on the components of the spring-applied brake. The influential factors must be quantified so that the service life of the rotor and brake can be calculated and so that the prescribed maintenance intervals can be specified accurately. The most important factors in this context are the applied friction work, the initial speed of rotation of braking and the operating frequency. If several of the causes of friction lining wear occur in an application at the same time, the effects should be added together when the amount of wear is calculated.

Component	Cause	Effect	Influencing factors
Friction lining	Braking during operation	Wear of the friction lining	Friction work
	Emergency stops		
	Overlapping wear during start and stop of drive		
	Active braking via the drive motor with support of brake (quick stop)		
	Starting wear in case of motor mounting position with vertical shaft, even when the brake is not applied		Number of start/stop cycles
Armature plate and counter friction surface	Rubbing and friction of the brake lining	Run-in of armature plate and counter friction surface	Friction work
Gear teeth of brake rotor	Relative movements and shocks between brake rotor and brake shaft	Wear of gear teeth (primarily on the rotor side)	Number of start/stop cycles
Armature plate support	Load reversals and jerks in the backlash between armature plate, adjustment tubes and guide pins	Breaking of armature plate, adjustment tubes and guide pins	Number of start/stop cycles, braking torque
Springs	Axial load cycle and shear stress of springs through radial backlash on reversal of armature plate	Reduced spring force or fatigue failure	Number of switching operations of brake

Tab. 18: Causes for wear

## 8.2 Inspections

To ensure safe and trouble-free operations, the spring-applied brakes must be checked at regular intervals and, if necessary, replaced. Servicing at the facility will be easier if the brakes are made accessible. This must be considered when installing the drives in the plant.

Primarily, the required maintenance intervals for industrial brakes result from their load during operation. When calculating the maintenance interval, all causes for wear must be taken into account. (Refer to the table [Causes for wear, Page 62](#)). For brakes with low loads (such as holding brakes with emergency stop function), we recommend a regular inspection at a fixed time interval. To reduce costs, the inspection can be carried out along with other regular maintenance work in the plant.

Failures, production losses or damage to the system may occur when the brakes are not serviced. Therefore, a maintenance strategy that is adapted to the particular operating conditions and brake loads must be defined for every application. For the spring-applied brakes, the maintenance intervals and maintenance operations listed in the table below must be followed. The maintenance operations must be carried out as described in the detailed descriptions.

### 8.2.1 Maintenance intervals

Versions	Operating brakes	Holding brakes with emergency stop
BFK458-□□ E / N BFK458-□□ L	■ according to the service life calculation	■ at least every 2 years
	■ or else every six months	■ after 1 million cycles at the latest*
	■ after 4000 operating hours at the latest	■ plan shorter intervals for frequent emergency stops

\* NOTICE: 10 million cycles for the L design type

## 8.3 Maintenance



### Notice


Brakes with defective armature plates, springs or flanges must be completely replaced. Observe the following for inspections and maintenance works:

- Contamination by oils and greases should be removed using brake cleaner, or the brake should be replaced after determining the cause. Dirt and particles in the air gap between the stator and the armature plate endanger the function and should be removed.
- After replacing the rotor, the original braking torque will not be reached until the run-in operation for the friction surfaces has been completed. After replacing the rotor, the run-in armature plates and the flanges have an increased initial rate of wear.

## 8.3.1 Checking the components

With mounted brake	■ Check release function and control	Refer to <u>Release / voltage, Page 65</u>
	■ Measure the air gap (adjust if required)	Refer to <u>Adjusting the air gap, Page 66</u>
	■ Measure the rotor thickness (replace rotor if required)	Refer to <u>Check the rotor thickness, Page 64</u>
	■ Thermal damage of armature plate or flange (dark-blue tarnishing)	
After removing the brake	■ Check the play of the rotor gear teeth (replace worn-out rotors)	Refer to <u>Replace rotor, Page 66</u>
	■ Check for breaking out of the torque support at the guide parts and the armature plate	
	■ Check the springs for damage	
	■ Check the armature plate and flange or end shield <ul style="list-style-type: none"> <li>– Flatness depending on the size</li> <li>– Max. run-in depth = rated air gap for the size</li> </ul>	Refer to the table <u>Design of end shield and shaft, Page 35</u> Refer to the table <u>Rated data for air gap specifications, Page 23</u>



## 8.3.2 Check the rotor thickness

	<b>⚠ DANGER</b>
	<b>Danger: rotating parts!</b> The motor must <b>not</b> be running when checking the rotor thickness.

1. Remove the fan cover.
2. Remove the cover ring, when present.
3. Measure the rotor thickness using a calliper gauge. For the friction-plate design: observe the edging on outer diameter of friction plate.
4. Compare the measured rotor thickness with the minimum permissible rotor thickness. (Refer to the values in the table Rated data for air gap specifications, Page 23.) If the measured rotor thickness is insufficient, the rotor must be replaced completely. (Refer to Replace rotor, Page 66 for the description.)







### 8.3.3 Checking the air gap

	 <b>DANGER</b>
	<b>Danger: rotating parts!</b> The motor must <b>not</b> run while the air gap is being checked.

1. Measure the air gap  $s_L$  between the armature plate and the stator near the fastening screws using a feeler gauge. (Refer to table Rated data for air gap specifications, Page 23 for the values.)
2. Compare the measured air gap to the value for the max. permissible air gap  $s_{Lmax}$ . (Refer to table Rated data for air gap specifications, Page 23 for the values.)
3. Adjust the air gap to  $s_{LN}$ . (Refer to Adjusting the air gap, Page 66).



### 8.3.4 Release / voltage

	 <b>DANGER</b>
	<b>Danger: rotating parts!</b> The running rotor must not be touched.

	 <b>DANGER</b>
	<b>There is a risk of injury by electrical shock!</b> The live connections must not be touched.


1. Check the brake functionality when the drive is running: The armature plate must be tightened and the rotor must move without residual torque.
2. Measure the DC voltage at the brake.
  - Compare the measured voltage to the voltage specified on the name plate. A deviation of up to 10% is permitted.
  - When using bridge/half-wave rectifiers: After switching to one-way voltage, the measured DC voltage may drop to 45% of the voltage specified on the name plate.

### 8.3.5 Adjusting the air gap

	<b>⚠ DANGER</b>
	<p><b>Danger: rotating parts!</b></p> <p>The brake must be free of residual torque.</p>
	<b>NOTICE</b>
	<p>Please observe when mounting the flange design with additional screws: Clearing holes for the screws in the end shield must be behind the threaded screw holes in the flange. Without the clearing holes, the minimal rotor thickness cannot be used. The screws must not press against the end shield.</p>

1. Loosen the screws (refer to the figure [Adjusting the air gap, Page 40](#) ).
2. Screw the sleeve bolts (using an open-end wrench) further into the stator. A 1/6 turn will decrease the air gap by approximately 0.15 mm.
3. Tighten the screws. (Refer to table [Rated data: screw kit for brake assembly on separately screwed-on flange, Page 24](#) for the torque values.)
4. Check the value of  $s_L$  near the screws using a feeler gauge. (Refer to table [Rated data for air gap specifications, Page 23](#).)

### 8.3.6 Replace rotor

	<b>⚠ DANGER</b>
	<p><b>Danger: rotating parts!</b></p> <p>Switch off the voltage. The brake must be free of residual torque. Your system should be mechanically immobilized in the event that it could start moving when the brake is released.</p>

1. Remove the connection cables.
2. Loosen the screws evenly and then remove them.
3. Pay attention to the connection cable during this step! Remove the complete stator from the end shield.
4. Pull the rotor off the hub.
5. Check the hub's gear teeth.
6. Replace the hub if wear is visible.
7. Check the end shield's friction surface. Replace the friction surface on the end shield when there is clearly visible scoring at the running surface. In case of strong scoring on the end shield, rework the friction surface.
8. Measure the rotor thickness of the new rotor and the head thickness of the sleeve bolts (use a calliper gauge).

9. Calculate the distance between the stator and the armature plate as follows:
  - **Distance = rotor thickness +  $s_{LN}$  - head height**  
(For values of  $s_{LN}$ , refer to the table Rated data for air gap specifications, Page 23.)
10. Unscrew the sleeve bolts evenly until the calculated distance between the stator and armature plate is reached.
11. You can now install and adjust the new rotor and the complete stator. (Refer to Mounting the brake, Page 38.)
12. Re-connect the connection cables.
13. If necessary, deactivate mechanical shutdown of the system.

## 8.4 Spare parts list

### Spring-applied brake INTORQ BFK458-06 to 25



Fig. 34: Spring-applied brake INTORQ BFK458-06 to 25

	Designation	Variant
Ⓐ	Hand-release with standard lever	Mounting kit
Ⓑ	Cap	Basic module N
Ⓒ	Shaft sealing ring	Shaft diameter on request
Ⓓ	Screw set DIN EN ISO 4762 - 8.8 in various designs and lengths	<ul style="list-style-type: none"> <li>■ for mounting to the flange</li> <li>■ for mounting to the motor / friction plate</li> <li>■ for flange with through hole</li> </ul>
Ⓔ	Complete stator, module E Complete stator, module N	Voltage / braking torque Module E: Optionally with rear threads
Ⓕ	Complete rotor	Aluminium rotor Aluminium rotor with sleeve - Noise-reduced design
Ⓖ	Hub	Bore diameter [mm] keyway according to DIN 6885/1
Ⓗ	Friction plate	
Ⓘ	Flange Hard chrome-plated flange	
Ⓙ	Centring flange (tacho flange)	
Ⓚ	Cover ring	
	Brake cover (degree of protection corresponds to IP65)	
	Terminal box as mounting kit	

## Double spring-applied brake INTORQ BFK458-06 to 25

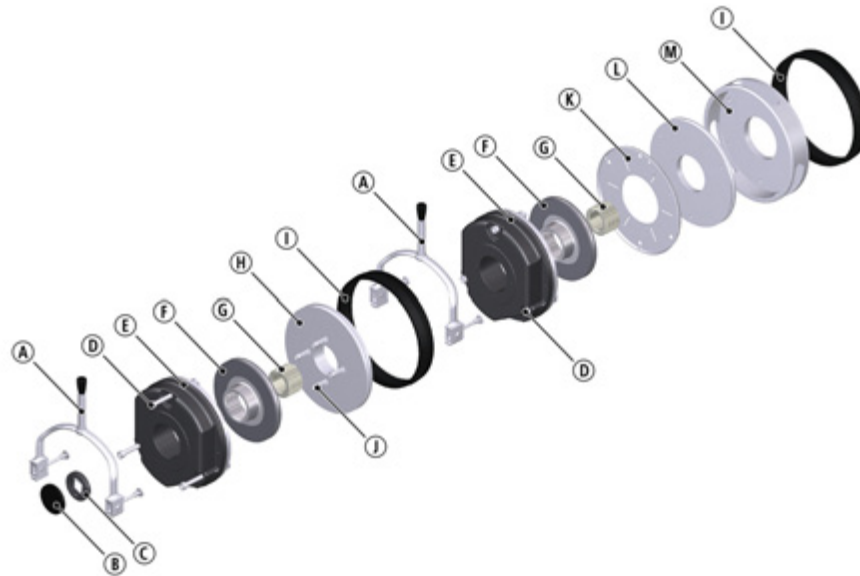


Fig. 35: Double spring-applied brake INTORQ BFK458-06 to 25

	Designation	Variant
Ⓐ	Hand-release with standard lever	Mounting kit
Ⓑ	Cap	Basic module N
Ⓒ	Shaft sealing ring	Shaft diameter on request
Ⓓ	Screw set DIN EN ISO 4762 - 8.8 in various designs and lengths	<ul style="list-style-type: none"> <li>■ for mounting to the flange</li> <li>■ for mounting to the motor / friction plate</li> <li>■ for flange with through hole</li> </ul>
Ⓔ	Complete stator, module N	Voltage / braking torque - Optionally with rear threads
Ⓕ	Complete rotor	Aluminium rotor Aluminium rotor with sleeve - Noise-reduced design
Ⓖ	Hub with standard bore	Bore diameter [mm] keyway according to DIN 6885/1
Ⓗ	Intermediate flange, double spring-applied brake	
Ⓘ	Cover ring	
Ⓙ	Screw set; socket head cap screw DIN EN ISO 4762 8.8 / size 25 10.9	for intermediate flange, double spring-applied brake
Ⓚ	Friction plate	
Ⓛ	Flange Hard chrome-plated flange	
Ⓜ	Centring flange (tachometer flange)	

## Electrical accessories

Bridge/half-wave rectifier	Supply voltage	Overexcitation		Holding current reduction	
		Coil voltage	Size	Coil voltage	Size
	[V AC]	[V DC]		[V DC]	
BEG-561-255-030	230	103	06 – 25	205	06 – 14
BEG-561-255-130			-		16 – 25
BEG-561-440-030-1	400	180	06 – 25	-	-

## 9 Troubleshooting and fault elimination

If any malfunctions should occur during operations, please check for possible causes based on the following table. If the fault cannot be fixed or eliminated by one of the listed steps, please contact customer service.

Fault	Cause	Remedy
Brake cannot be released, air gap is not zero	Coil interruption	<ul style="list-style-type: none"> <li>■ Measure coil resistance using a multimeter:                             <ul style="list-style-type: none"> <li>- Compare the measured resistance with the nominal resistance. Refer to <u>Rated data for coil powers, Page 25</u> for the values.</li> <li>- If resistance is too high, replace the complete spring-applied brake.</li> </ul> </li> </ul>
	Coil has contact to earth or between windings	<ul style="list-style-type: none"> <li>■ Measure coil resistance using a multimeter:                             <ul style="list-style-type: none"> <li>- Compare the measured resistance with the nominal resistance. Refer to <u>Rated data for coil powers, Page 25</u> for the values. If resistance is too low, replace the complete stator.</li> </ul> </li> <li>■ Check the coil for short to ground using a multimeter:                             <ul style="list-style-type: none"> <li>- If there is a short to ground, replace the complete spring-applied brake.</li> </ul> </li> <li>■ Check the brake voltage (refer to section on defective rectifier, voltage too low).</li> </ul>
	Wiring defective or wrong	<p>Check the wiring and correct.</p> <ul style="list-style-type: none"> <li>■ Check cable for continuity using a multimeter</li> <li>- Replace the defective cable.</li> </ul>
	Rectifier defective or incorrect	<ul style="list-style-type: none"> <li>■ Measure rectifier DC voltage using a multimeter.</li> <li>■ If DC voltage is zero:                             <ul style="list-style-type: none"> <li>■ Check AC rectifier voltage.</li> <li>■ If AC voltage is zero:                                     <ul style="list-style-type: none"> <li>- Switch on the voltage</li> <li>- Check the fuse</li> <li>- Check the wiring</li> </ul> </li> <li>■ If AC voltage is okay:                                     <ul style="list-style-type: none"> <li>- Check the rectifier</li> <li>- Replace the defective rectifier</li> </ul> </li> </ul> </li> <li>■ Check coil for inter-turn fault or short circuit to ground.</li> <li>■ If the rectifier defect occurs again, replace the entire spring-applied brake, even if you cannot find any fault between turns or short circuit to ground. The error may only occur on warming up.</li> </ul>

Fault	Cause	Remedy
Brake cannot be released, air gap is not zero	Incorrect micro-switch wiring	Check the wiring of the micro-switch and correct it.
	Micro-switch incorrectly set	Replace the complete stator and make a complaint about the setting of the micro-switch to the manufacturer.
	Air gap $s_L$ is too large	Adjust the air gap (refer to <a href="#">Adjusting the air gap</a> , Page 66).
Rotor cannot rotate freely	Wrong setting of hand-release	Check the dimensions $s_{LN} + s_{HL}$ with the brake energised. The dimensions must be the same on both sides. Correct if required. (Refer to <a href="#">Installing the hand-release (retrofitting)</a> , Page 48.)
	Air gap $s_L$ is too small	Check air gap $s_L$ and adjust if necessary (refer to <a href="#">Adjusting the air gap</a> , Page 66).
Rotor thickness too small	Rotor has not been replaced in time	Replace the rotor (refer to <a href="#">Replace rotor</a> , Page 66).
Voltage too high	Brake voltage does not match the rectifier	Adjust rectifier and brake voltage to each other.
Voltage too low	Brake voltage does not match the rectifier	Adjust rectifier and brake voltage to each other.
	Defective rectifier diode	Replace the defective rectifier with a suitable undamaged one.
AC voltage is not mains voltage	Fuse is missing or defective	Select a connection with proper fusing.





INTORQ GmbH & Co KG

Germany

PO Box 1103

D-31849 Aerzen, Germany

Wülmser Weg 5

D-31855 Aerzen, Germany



+49 5154 70534-0 (Headquarters)



+49 5154 70534-222 (Sales)



+49 5154 70534-200



info@intorq.com



应拓柯制动器 ( 上海 ) 有限责任公司

INTORQ (Shanghai) Co., Ltd.

上海市浦东新区泥城镇新元南路600

号6 号楼一楼B 座

No. 600, Xin Yuan Nan Road,

Building No. 6 / Zone B

Nicheng town, Pudong

201306 Shanghai



+86 21 20363-810



+86 21 20363-805



info@cn.intorq.com



INTORQ US Inc.

USA

300 Lake Ridge Drive SE

Smyrna, GA 30082, USA



+1 678 236-0555



+1 678 309-1157



info@us.intorq.com



INTORQ India Private Limited

India

Plot No E-7/3

Chakan Industrial Area, Phase 3

Nighoje, Taluka - Khed

Pune, 410501, Maharashtra



+91 2135625500



info@intorq.in